



See the possibilities

User Manual

GO-5100MP-PGE


5.1M CMOS Digital Progressive Scan

Polarized Camera

Document Version: 1.0

GO-5100MP-PGE_Ver.1.0_Jun.2019

Thank you for purchasing this product.

 Be sure to read this manual before use.

This manual includes important safety precautions and instructions on how to operate the unit. Be sure to read this manual to ensure proper operation.

The contents of this manual are subject to change without notice for the purpose of improvement.

© 2019 JAI

Contents

Notice/Warranty/Certifications.....	3	Gain Control	38
Usage Precautions.....	5	Line Status	38
Features	6	Blemish Compensation.....	39
Parts Identifications.....	7	Shading Correction	40
Preparation	11	Sequencer Function.....	42
Preparation Process.....	11	Delayed Readout.....	44
Step 1:Installing the Software(first time only)	11	CounterAndTimerControl Function	44
Step 2:Connecting Devices.....	12	Chunk Data Function	46
Step 3:Verifying Camera Operation.....	14	VideoProcessBypassMode	46
Step 4:Verifying the Connection between the Camera and PC.....	14	Setting List	47
Step 5:Changing the Camera Settings..	17	Feature Properties	47
Step 6:Adjusting the Image Quality.....	18	Miscellaneous.....	59
Step 7:Saving the Settings	20	Troubleshooting	59
Main Functions	22	Specifications.....	60
Basic Function Matrix	22	Frame Rate Reference.....	62
GPIO(Digital Input/Output Settings)....	22	Spectral Response.....	62
Camera Output Formats	23	Dimensions.....	63
Camera Image Output Modes	24	Comparison of the Decibel Display and Multiplier Display	64
Binning Function	26	User's Record	65
12-bit Output	29	Index.....	66
ROI(Regional Scanning Function).....	29		
Image Acquisition Controls.....	30		
Exposure Mode.....	32		
Trigger Control	33		

Notice

The material contained in this manual consists of information that is proprietary to JAI Ltd., Japan and may only be used by the purchasers of the product. JAI Ltd., Japan makes no warranty for the use of its product and assumes no responsibility for any errors which may appear or for damages resulting from the use of the information contained herein. JAI Ltd., Japan reserves the right to make changes without notice. Company and product names mentioned in this manual are trademarks or registered trademarks of their respective owners.

Warranty

For information about the warranty, please contact your factory representative.

Certifications

CE compliance

As defined by the Directive 2004/108/EC of the European Parliament and of the Council, EMC (Electromagnetic compatibility), JAI Ltd., Japan declares that GO-5100MP-PGE complies with the following provisions applying to its standards.

EN 61000-6-3 (Generic emission standard part 1)

EN 61000-6-2 (Generic immunity standard part 1)

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning

Changes or modifications to this unit not expressly approved by the party responsible for FCC compliance could void the user's authority to operate the equipment.

Supplement

The following statement is related to the regulation on “ Measures for the Administration of the control of Pollution by Electronic Information Products ”, known as “ China RoHS ”. The table shows contained Hazardous Substances in this camera.

 mark shows that the environment-friendly use period of contained Hazardous Substances is 15 years.

重要注意事项

有毒，有害物质或元素名称及含量表

根据中华人民共和国信息产业部『电子信息产品污染控制管理办法』，本产品《有毒，有害物质或元素名称及含量表》如下。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PPB)	多溴二苯醚 (PBDE)
棱镜	×	○	○	○	○	○
光学滤镜	×	○	×	○	○	○
连接插头	×	○	○	○	○	○
电路板	×	○	○	○	○	○
.....

○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006规定的限量要求以下。
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006规定的限量要求。
 （企业可在此处、根据实际情况对上表中打“×”的技术原因进行进一步说明。）



环保使用期限

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变、电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对基人身、财产造成严重损害的期限。

数字「15」为期限15年。


Usage Precautions

Notes on cable configurations

The presence of lighting equipment and television receivers nearby may result in video noise. In such cases, change the cable configurations or placement.

Notes on LAN cable connection

Secure the locking screws on the connector manually, and do not use a driver. Do not secure the screws too tightly. Doing so may wear down the screw threads on the camera. (Tightening torque: 0.147 Nm or less)

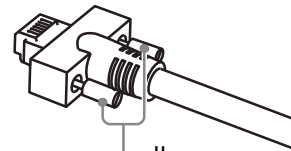

Secure manually.
Do not secure too tightly.

Notes on attaching the lens

Avoiding dust particles

When attaching the lens to the camera, stray dust and other particles may adhere to the sensor surface and rear surface of the lens. Be careful of the following when attaching the lens.

- Work in a clean environment.
- Do not remove the caps from the camera and lens until immediately before you attach the lens.
- To prevent dust from adhering to surfaces, point the camera and lens downward and do not allow the lens surface to come into contact with your hands or other objects.
- Always use a blower brush to remove any dust that adheres.
Never use your hands or cloth, blow with your mouth, or use other methods to remove dust.

Phenomena specific to CMOS image sensors

The following phenomena are known to occur on cameras equipped with CMOS image sensors. These do not indicate malfunctions.

- Aliasing
When shooting straight lines, stripes, and similar patterns, vertical aliasing (zigzag distortion) may appear on the monitor.
- Blooming
When strong light enters the camera, some pixels on the CMOS image sensor may receive much more light than they are designed to hold, causing the accumulated signal charge to overflow into surrounding pixels. This "blooming" phenomenon can be seen in the image, but does not affect the operation of the camera.
- Fixed pattern noise
When shooting dark objects in high-temperature conditions, fixed pattern noise may occur throughout the entire video monitor screen.
- Defective pixels
Defective pixels (white and black pixels) of the CMOS image sensor are minimized at the factory according to shipping standards. However, as this phenomenon can be affected by the ambient temperature, camera settings (e.g., high sensitivity and long exposure), and other factors, be sure to operate within the camera's specified operating environment.

Notes on exportation

When exporting this product, please follow the export regulations of your country or region.

Features

The GO-5100MP-PGE is a machine vision polarization camera incorporating a monochrome CMOS image sensor with a 2/3-inch global shutter and a four-directional polarization square pixel array that offers 5.1 effective megapixels (2464 × 2056). The unit is compact and lightweight in design and is equipped with a GigE Vision Ver2.0 interface.

Image sensor with four-directional polarization

Polarizers are provided for individual pixels to capture polarization.

90	45	90	45	90	45
135	0	135	0	135	0
90	45	90	45	90	45
135	0	135	0	135	0
90	45	90	45	90	45
135	0	135	0	135	0

The numbers in the figure on the left indicate the polarizer angles.

Four polarizer angles are available: 0°, 45°, 90°, and 135°.


Also, various functions considered necessary for machine vision are provided.

The unit is equipped with pre-processing circuits for shading correction and blemish correction in addition to external trigger, exposure setting, and image level control.


Feature overview

- Compliance with GigE Vision Ver2.0 and GenICam standards
- 2/3-inch global shutter and a four-directional polarization square pixel array that offers 5.1 effective megapixels CMOS sensor
- Lens mount: C-mount (flange back: 17.526 mm)
- Pixel size : 3.45 μm × 3.45 μm
- Effective pixels 2464(H) × 2056(V)
- Up to 22.7 fps at full resolution
- Internal test signal for settings configuration
- eBUS SDK for JAI that supports Windows 7, 8, 10

Connection example:

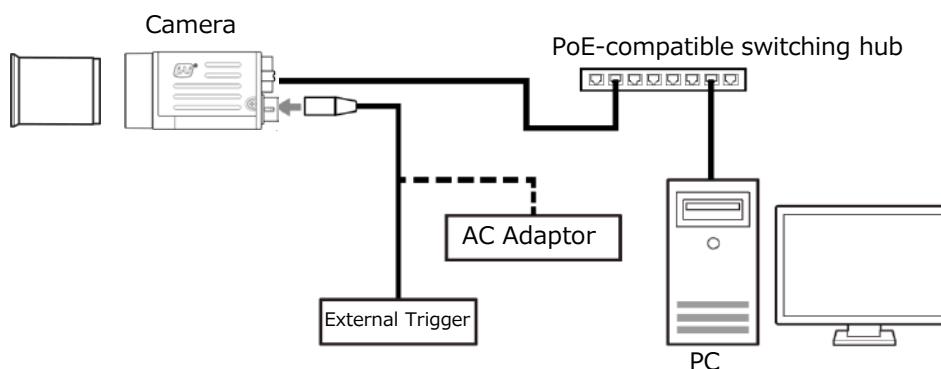

Parts Identification

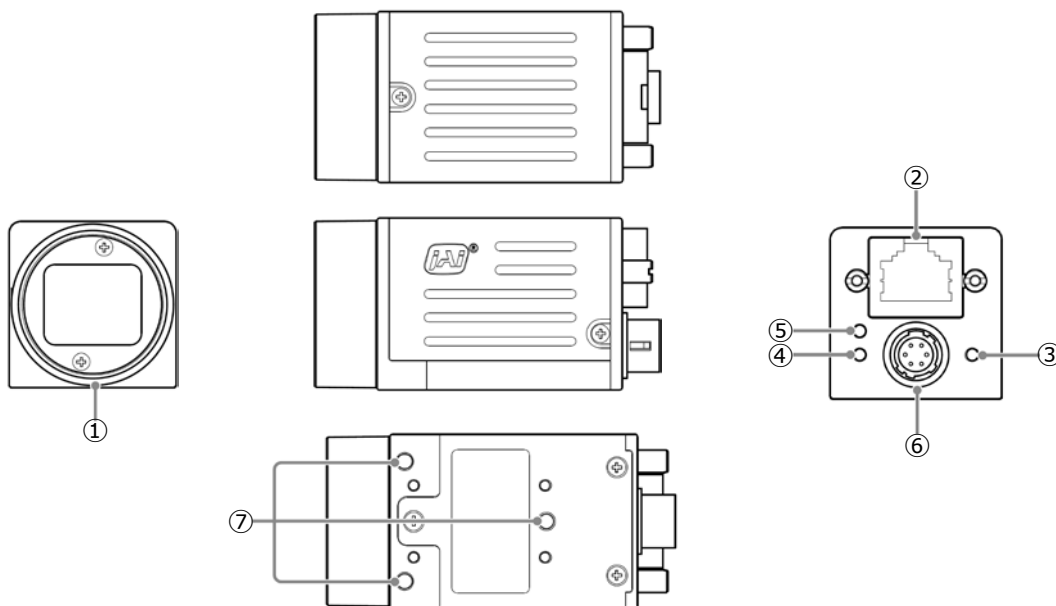


① Lens mount (C-mount)

Mount a C-mount lens, microscope adapter, etc. here.

❖ Before mounting a lens, be sure to refer to “Step 2:Connecting Devices” and confirm the precautions for attaching a lens and the supported lens types.

② RJ-45 connector

Connect a Gigabit Ethernet compatible LAN cable (Category 5e or higher, Category 6 recommended) here.

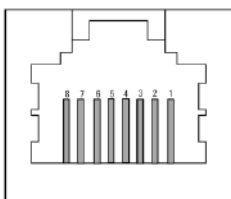

Pin No.	Input / Output	Description
1	In/Out	MX1+ (DA+)
2	In/Out	MX1- (DA-)
3	In/Out	MX2+ (DB+)
4	In/Out	MX3+ (DC+)
5	In/Out	MX3- (DC-)
6	In/Out	MX2- (DB-)
7	In/Out	MX4+ (DD+)
8	In/Out	MX4- (DD-)

③ POWER/TRIG LED

Indicates the power and trigger input status.

LED status and camera status

LED	Light	Status
POWER/ TRIG LED	● (Lit amber)	Camera initializing.
	● (Lit green)	Camera in operation.
	✱ (Blinking green)	During operation in trigger mode, trigger signals are being input. ❖ The blinking interval is not related to the actual input interval of the external trigger.

④ ACT LED

Indicates the GigE network status.

LED	Light	Status
ACT LED	✱ (Blinking amber)	Network communication in progress


⑤ LINK LED

Indicates whether the GigE network connection is established or not.

LED	Light	Status
LINK LED	● (Lit green)	1000BASE-T Link established

⑥ DC IN/TRIG connector (6-pin round)


Connect the cable for a power supply (optional) or for DC IN / trigger IN here.

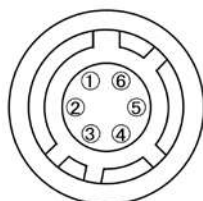


HR10A-7R-6PB (73) (Hirose Electric or equivalent)

Pin No.	Input / Output	Signal	Description
1		DC In	DC +12 V ~ +24 V
2	In	Opto In 1	GPIO 5
3	Out	Opto Out 1	GPIO 1
4	Out	Opto Out 2	GPIO 2
5		Opto Common	
6		GND	


Recommended external input circuit diagram (reference example)

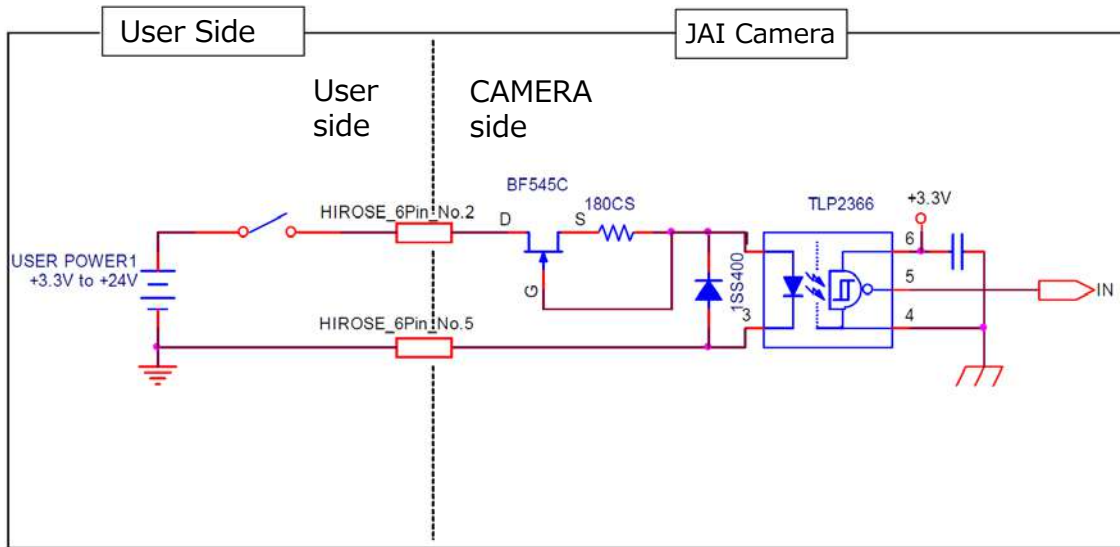

Recommended external output circuit diagram (reference example)
Standard circuit diagram example

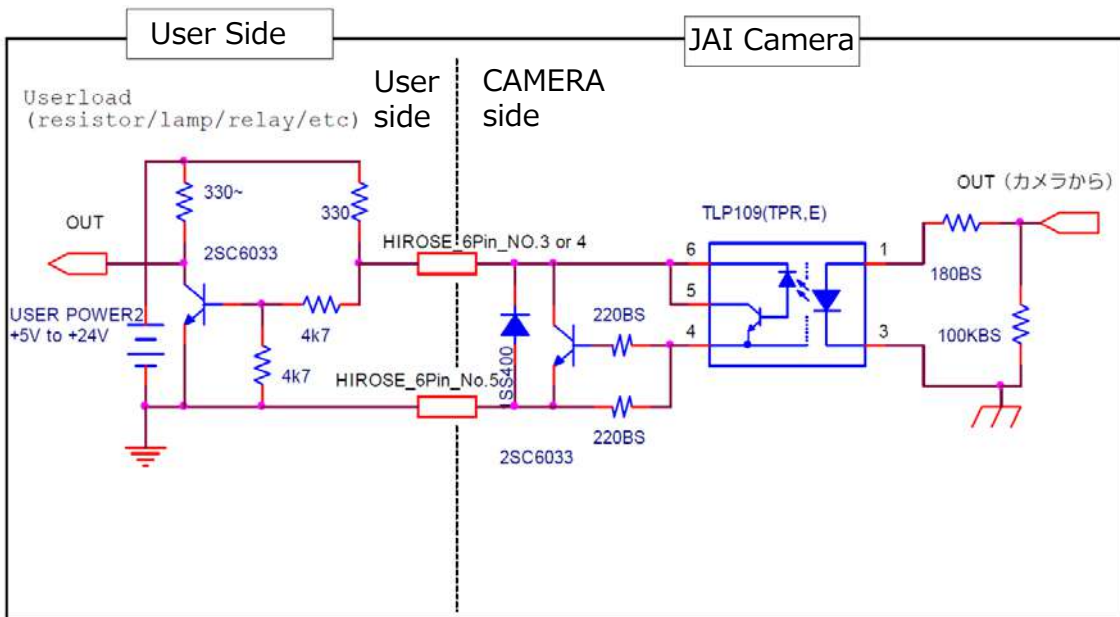

Characteristics of the recommended circuits for Opto OUT

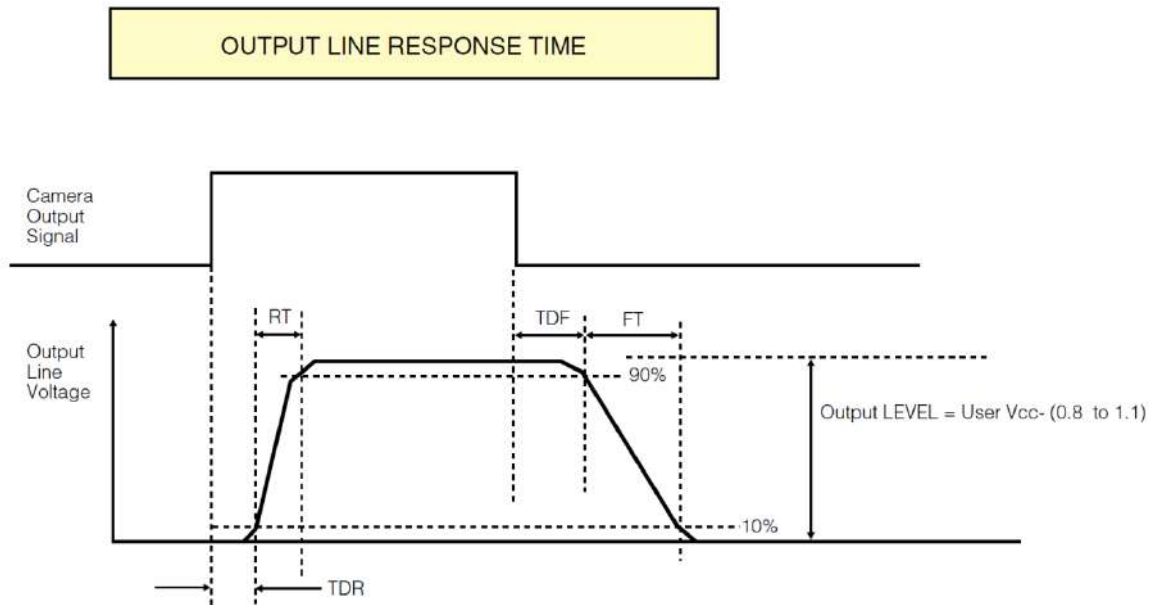


⑦ Camera locking screw holes (M3, 3mm depth)

Use these holes when attaching an MP-43 tripod adapter plate (optional) or mounting the camera directly to a wall or other structural system.

* The smaller holes (x4) are M2 with a depth of 3mm.

Preparation

Preparation Process

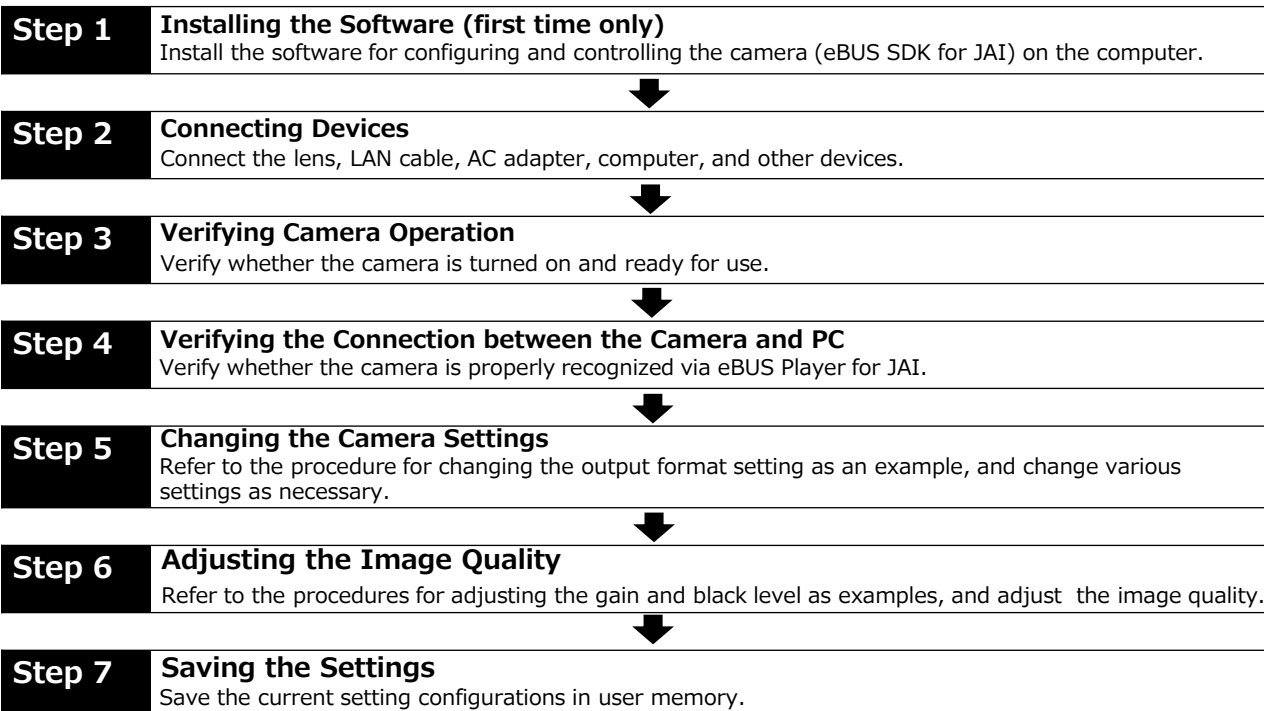

Step 1: Installing the Software (first time only)

When using the camera for the first time, install the software for configuring and controlling the camera (eBUS SDK for JAI) on the computer.

❖ When you install eBUS SDK for JAI, eBUS SDK for JAI player will also be installed.


- 1** Download the eBUS SDK for JAI from the JAI website.
URL <https://www.jai.com/support-software/jai-software>
- 2** Install eBUS SDK for JAI on the computer.

Caution

eBUS SDK for JAI was released in April 2018 and is the latest software for setting and controlling JAI cameras.


When JAI SDK and eBUS SDK for JAI are installed on the same machine, conflicts can occur. Therefore, JAI strongly recommends that JAI SDK is uninstalled before installing eBUS SDK for JAI.

Step 2: Connecting Devices

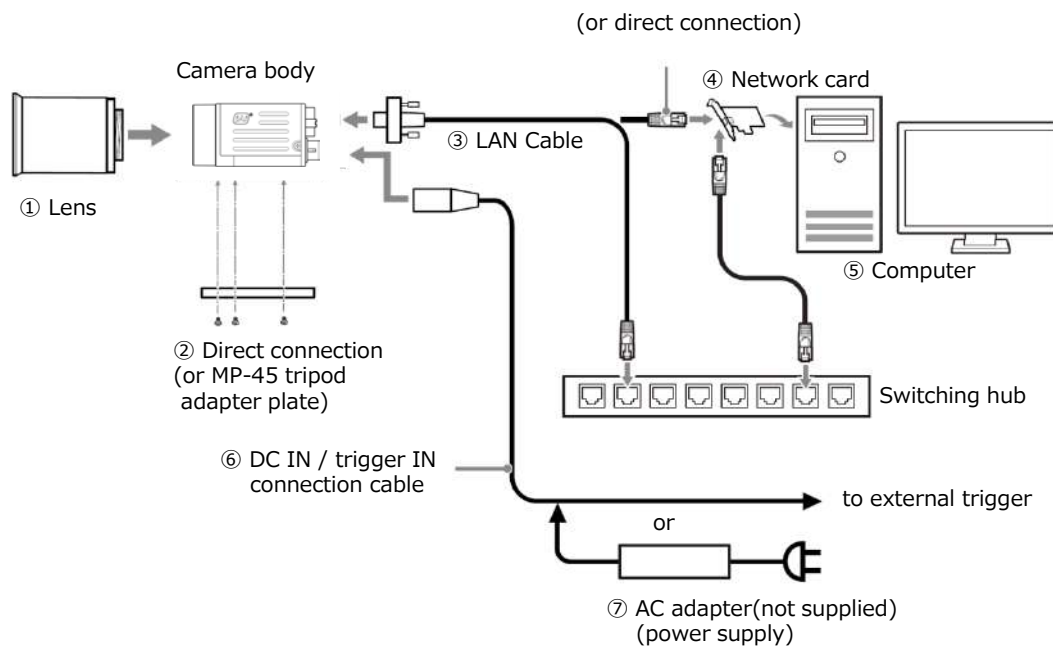

① Lens

- C-mount lenses with lens mount protrusions of 9 mm or less can be attached.

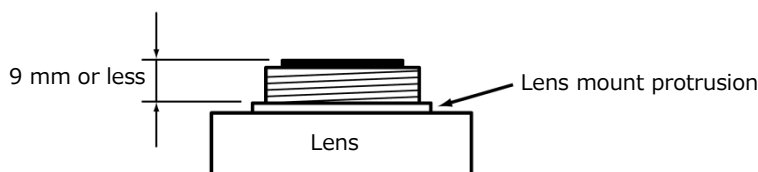

- The diagonal of the camera's CMOS image sensor is 11 mm, the size of standard 2/3-inch lenses. To prevent vignetting and to obtain the optimal resolution, use a lens that will cover the 11 mm diagonal. Some lens manufacturers offer lenses with an 11 mm format. If not, a 2/3-inch lens is recommended.

Caution

- The maximum performance of the camera may not be realized depending on the lens.
- Attaching a lens with a mount protrusion of 9 mm or longer may damage the lens or camera.

Note

The following formula can be used to estimate the focal length.

$$\text{Focal length} = \text{WD} / (1 + \text{W}/\text{w})$$

WD : Working distance (distance between lens and object)

W : Width of object

w : Width of sensor (8.5 mm on this camera)

② Direct connection (or MP-43 tripod adapter plate)

When mounting the camera directly to a wall or other device, use screws that match the camera locking screw holes on the camera (M3, depth: 3 mm). Use the supplied screws to attach the tripod adapter plate.

Caution

For heavy lenses, be sure to support the lens itself. Do not use configurations in which its weight is supported by the camera.


③ LAN cable

Connect a LAN cable to the RJ-45 connector.

- Use a LAN cable that is Category 5e or higher (Category 6 recommended).
- When supplying power via PoE, connect to a PoE-compatible switching hub or a PoE-compatible network card.
- Refer to the specifications of the cable for details on its bend radius.

Caution

Secure the locking screws on the connector manually, and do not use a driver. Do not secure the screws too tightly. Doing so may wear down the screw threads on the camera. (Tightening torque: 0.147 Nm or less)

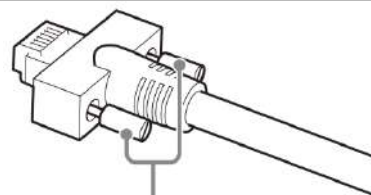

Secure manually.
Do not secure too tightly.

④ Network card

Install this in the computer that will be used to configure and operate the camera. As the GO-5100MP-PGE supports PoE, you can also use PoE-compatible network cards. Refer to the instruction manual of the network card, and configure settings on the computer as necessary.

⑤ Computer

Use a computer that meets the following requirements.

Operating system (OS):

Microsoft Windows 7/8/10 32-bit/64-bit edition

CPU:

Intel Core i3 or higher

Memory:

Windows 7/8/10 32-bit edition: DDR3, 4 GB or higher

Windows 7/8/10 64-bit edition: DDR3, 8 GB or higher

Graphics card: PCI-Express 3.0 or higher

Network card: We recommend using a network card that uses an Intel chip.

⑥ **DC IN / trigger IN connection cable**


⑦ **AC adapter (power supply) (if necessary)**

Connect the AC adapter and the round connector of the connection cable to the DC IN / trigger IN connector on the camera.

Step 3: Verifying Camera Operation

When power is supplied to the camera while the necessary equipment is connected, the POWER/TRIG LED at the rear of the camera lights amber, and initialization of the camera starts. When initialization is complete, the POWER/TRIG LED lights green.

Verify whether power is being supplied to the camera and whether the camera is connected to the network by checking the rear LEDs.

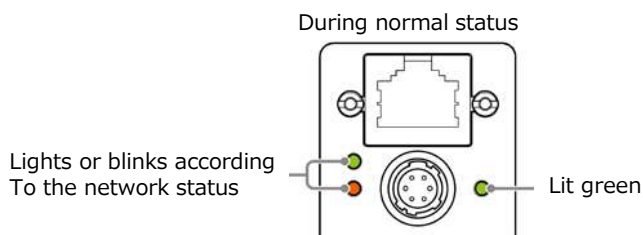

* For details on how to read the LEDs, see “LED status and camera status” in the “Parts Identification” section.

Note

Initialization of the camera will not complete unless it is connected to the network. If the power / trigger LED does not switch to green within minutes of supplying power, check the LAN cable and other connections. After initialization is completed once, the power / trigger LED will remain green, even if the network is disconnected.

Step 4: Verifying the Connection between the Camera and PC


Verify whether the camera is properly recognized via eBUS Player for JAI.

Connecting the Camera to eBUS Player for JAI.

1 Startup eBUS Player for JAI




eBUS Player for JAI startup screen appears.

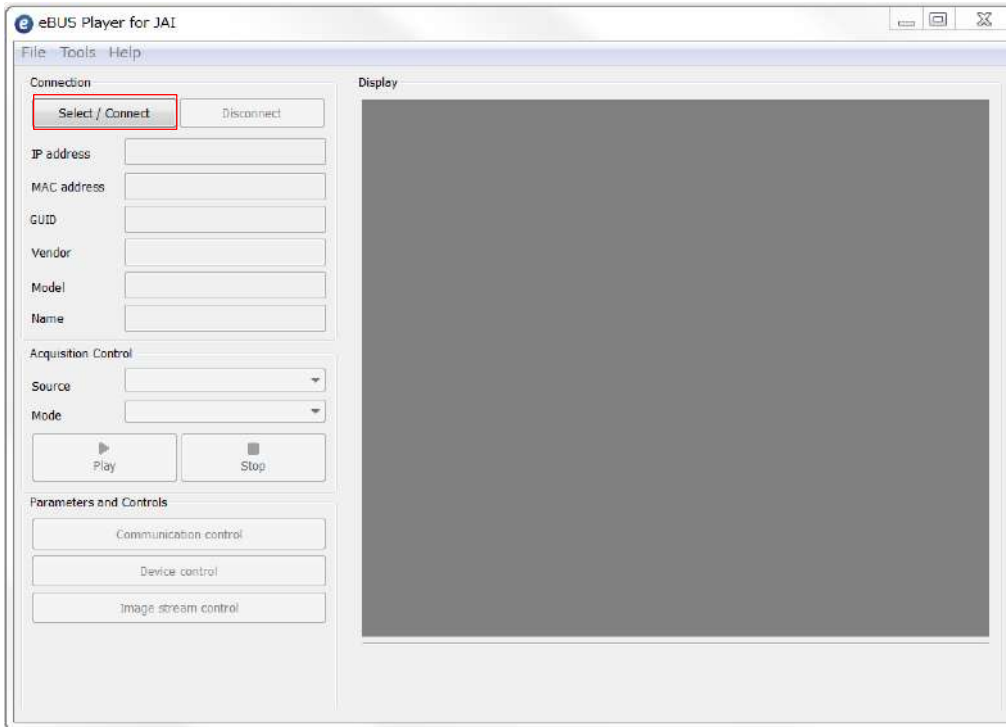


2 Select the camera you want to configure.

Push Select / Connect button

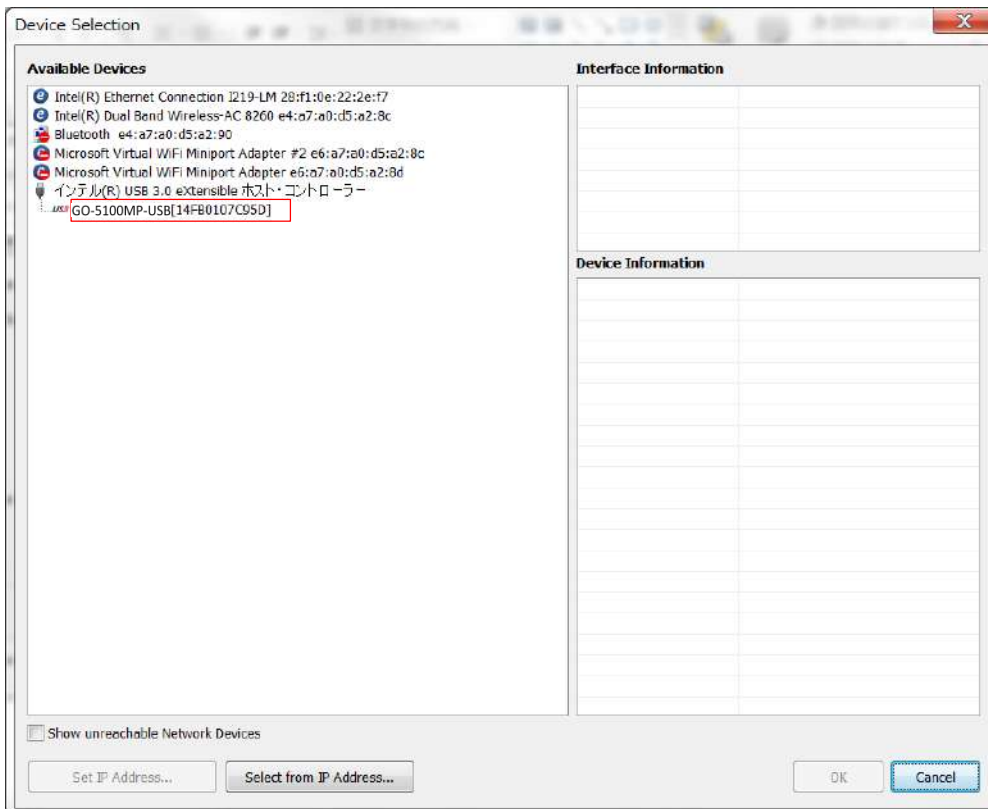


The connected camera is listed.
Please select one camera.

3 Check that the settings of the selected camera are displayed.

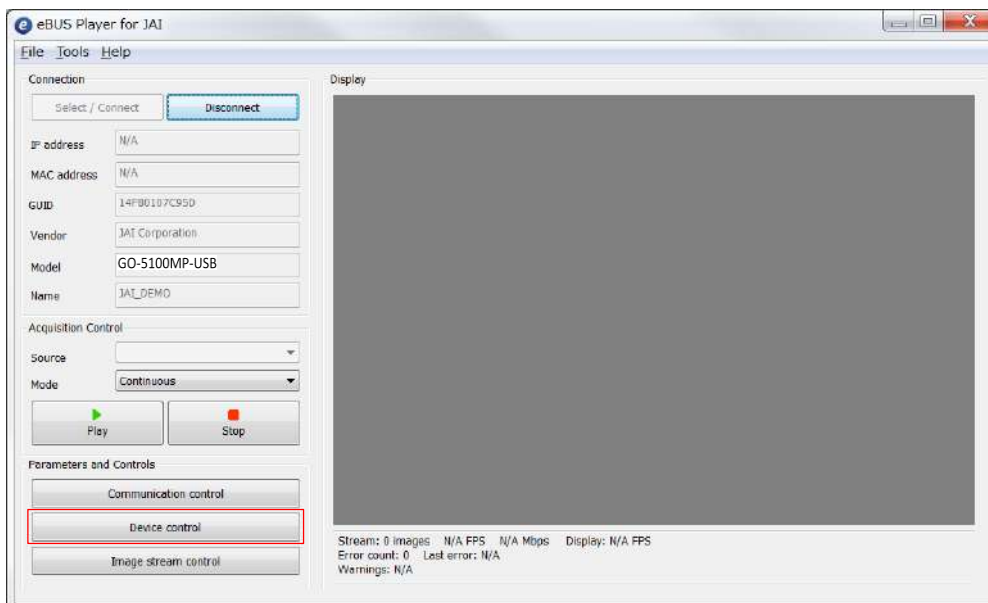

Push the Device control button.
The screen shown below will be displayed. In this window you can adjust various settings of the camera.

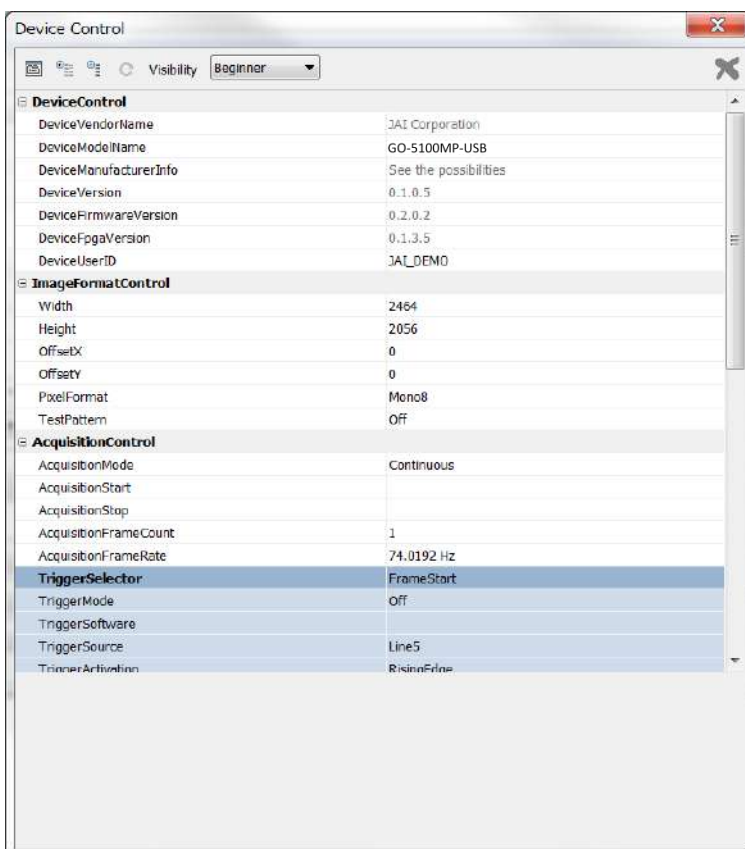

This completes the procedure for verifying whether the camera is properly recognized and whether control and settings configuration are possible.

Step 5: Changing the Camera Settings

This section explains how to change settings by describing the procedure for changing the output format as an example.

Configuring the Output Format

Configure the size, position, and pixel format of the images to be acquired.
The factory settings are as follows. Change the settings as necessary.


Factory default values

	Item	Default value
ImageFormatControl	Width	2464
	Height	2056
	OffsetX (horizontal position)	0
	OffsetY (vertical position)	0
	PixelFormat	Mono8

* You can specify the image acquisition area. For details, see "ROI (Regional Scanning Function)".

1 Configuring the [Width] of [ImageFormatControl]

By selecting the item of [Width], you can change the value as shown below.

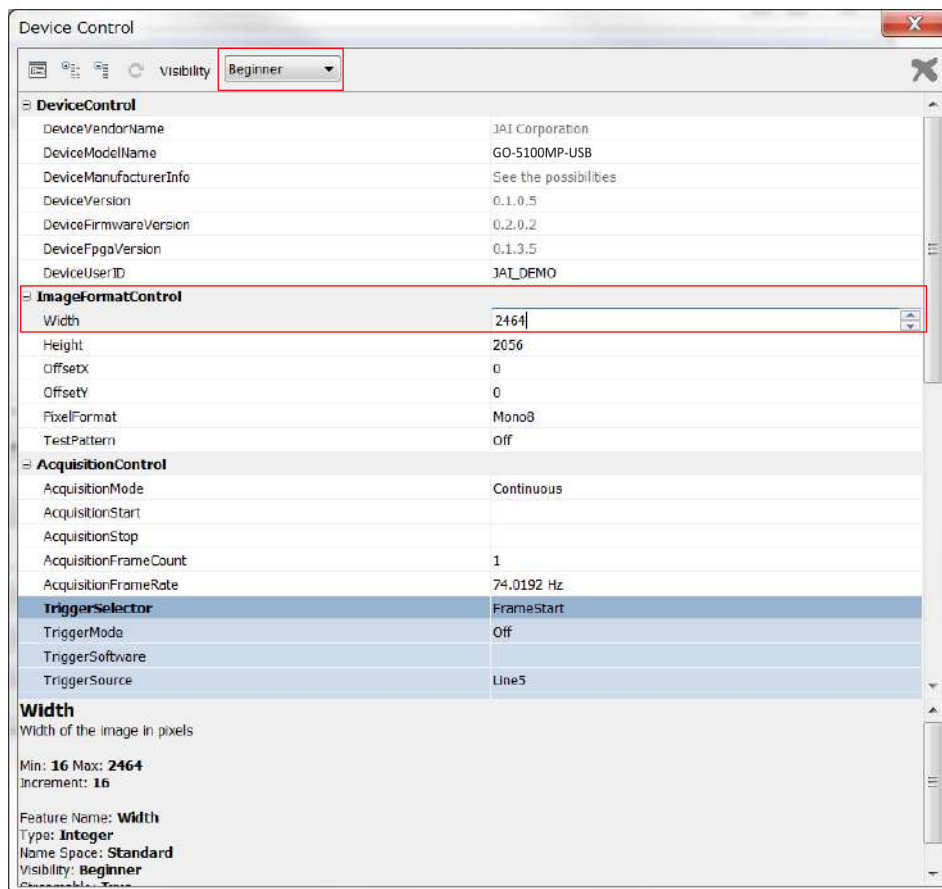

Note

Depending on the setting item, you need to change visibility.
Please switch visibility (Beginner / Expert / Guru) as necessary.


Step 6: Adjusting the Image Quality

Display the camera image and adjust the image quality.

Displaying the Image

Display the image captured by the camera.

When you push [Play] button, the camera image appears in right area.

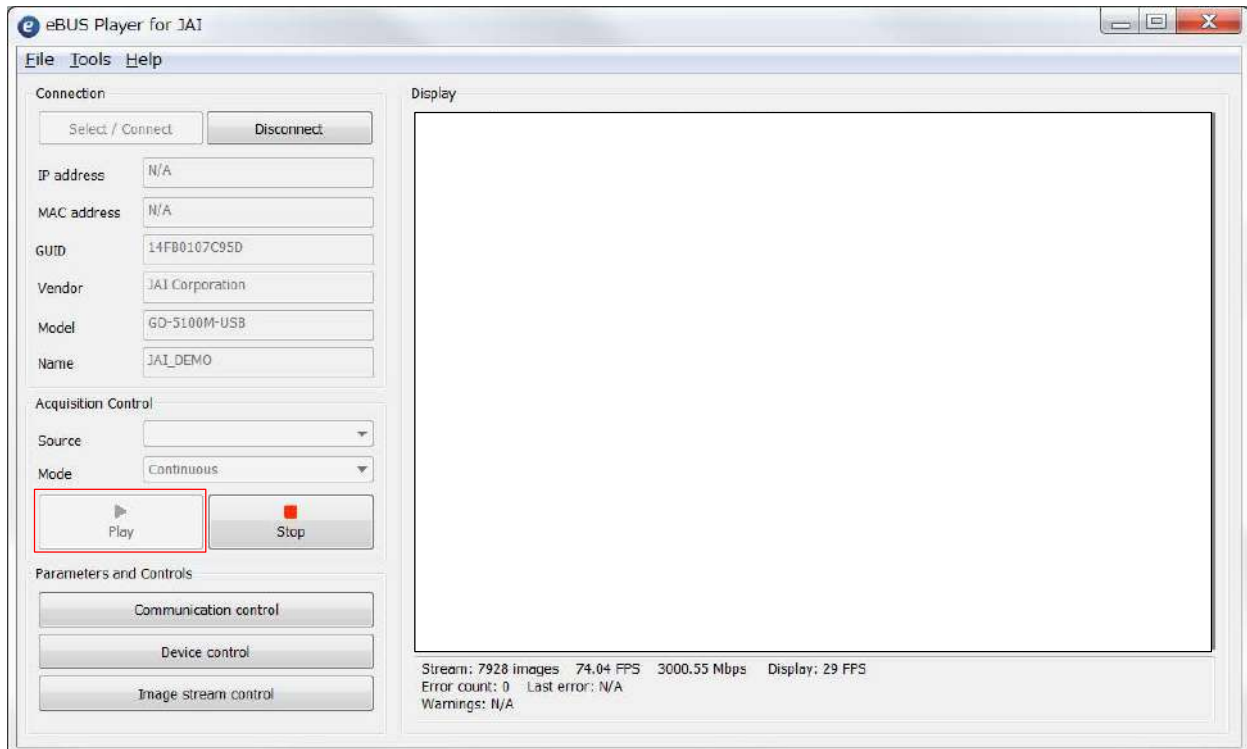

Adjusting the Gain

Adjust the image quality using the gain function.

To adjust the image quality

The Visibility must be changed from [Beginner] to [Guru].

Adjust the sensitivity via the analog gain (i.e., master gain).
For details on gain control, see “Gain Control” in the “Main Functions” section.

■ Manual adjustment

1 Expand [AnalogControl], and set [GainAuto] to [Off].

([Off] is default setting.)

2 Configure the gain.

- ① Expand [AnalogControl], and select the gain you want to configure in [GainSelector].
[AnalogAll] (master gain) can be configured.
- ② Configure the gain value in [Gain].
 - [AnalogAll] (master gain) can be set to a value from x1 to x16 the analog gain value. The resolution is set in x0.1 steps. Values are configured by multipliers.

Adjusting the Black Level


1 Expand [AnalogControl], and select the black level you want to configure in [BlackLevelSelector].

[DigitalAll] (master black) can be configured.

2 Specify the adjustment value in [BlackLevel].

Step 7: Saving the Settings

The setting values configured in the player (eBUS SDK for JAI) will be deleted when the camera is turned off. By saving current setting values to user memory, you can load and recall them whenever necessary. You can save up to three sets of user settings in the camera. (User Set1 to 3)

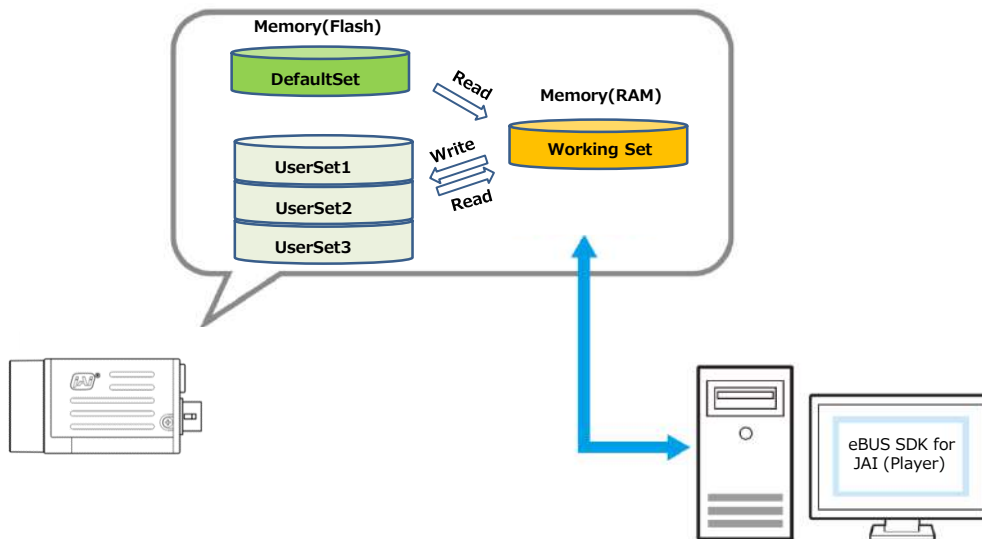

Note

Changes to settings are not saved to the computer (eBUS SDK for JAI).

■ To save user settings

- 1** Stop image acquisition.
- 2** Expand [UserSetControl], and select the save destination ([UserSet1] to [UserSet3]) in [UserSetSelector].

Note

The factory default setting values are stored in [Default] and cannot be overwritten.

Caution

Settings can only be saved when image acquisition on the camera is stopped.

- 3** Select [UserSetSave], and click [Execute 'UserSetSave' Command].

The current setting values are saved as user settings.

■ To load user settings

1 Stop image acquisition.

User settings can only be loaded when image capture on the camera is stopped.

2 Select the settings to load (UserSet1 to UserSet3) in [UserSetSelector].

3 Select [UserSetLoad], and click [Execute 'UserSetLoad' Command].

The selected user settings are loaded.

Main Functions

Basic Function Matrix

The combinations of settings for the basic functions that can be used together are as follows.

ExposureMode	FrameStartTrigger	Binning Vertical	Binning Horizontal	ExposureTime	ROI	GainAuto	ExposureAuto
Off	Off	1 x 1		x	○	○	x
		1 x 2		x	x	○	x
		2 x 1		x	x	○	x
		2 x 2		x	x	○	x
Timed	Off	1 x 1		○	○	○	○
		1 x 2		○	x	○	○
		2 x 1		○	x	○	○
		2 x 2		○	x	○	○
Timed(EPS)	On	1 x 1		○	○	○	○
		1 x 2		○	x	○	○
		2 x 1		○	x	○	○
		2 x 2		○	x	○	○
TriggerWidth	On	1 x 1		x	○	○	x
		1 x 2		x	x	○	x
		2 x 1		x	x	○	x
		2 x 2		x	x	○	x

GPIO (Digital Input/Output Settings)

The camera is equipped with GPIO (general-purpose input/output) functions for generating and using combinations of triggers and other necessary signals within the camera and of signals output from the camera to the system such as those used for lighting equipment control.

Valid Input/Output Combinations

The following signals can be used as sources for each output destination (Trigger Selector, Line Selector, Pulse Generator Selector).

You can also connect two different sources to NAND paths in the GPIO and reuse the signal generated there as a source for a different selector.

The combinations of source signals and output destinations are indicated in the following.

Selector (Cross point Switch output)		Output destination											
		Trigger Selector				Line Selector						Pulse Generator Selector	
		Acquisition Start	Acquisition End	Frame Start	Transfer Start	Line2 OPT out1 (GPIO 1)	Line3 OPT out2 (GPIO 2)	Time Stamp Reset	NAND 0 In 1	NAND 0 In 2	NAND 1 In 1	NAND 1 In 2	Pulse Generator 0
Signals to use as output	Low	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	High	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Line5 OptIn1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	NAND 0 Out	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	NAND 1 Out	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	Pulse Generator 0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
	User Output 0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	User Output 1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Software Trigger	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Action 1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	Action 2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	FVAL	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	LVAL	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
	Exposure Active	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Frame Trigger Wait	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Frame Active	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Acquisition Trigger Wait	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Trigger Source				Line Source						Pulse Generator Clear Source			
Use													

: Indicates default values for each selector.

Camera Output Formats

The GO-5100MP-PGE supports the following output formats.

PixelFormat
Mono8, Mono10, Mono10packed
*1) Mono12, Mono12Packed

*1) When VideoProcessBypassMode is enabled, PixelFormat can be set to Mono12 or Mono12Packed. For details, see "12-bit Output" section.

Camera Image Output Modes

The GO-5100MP-PGE has two output modes(Raw Image mode, Polarize Angle And Degree mode).


First, we will explain about the monochrome CMOS image sensor with a four-directional polarization square pixel array that is incorporated in this camera.

A polarizer with one of the four angles of 0° , 45° , 90° , and 135° is provided for each pixel.

90	45	90	45	90	45
135	0	135	0	135	0
90	45	90	45	90	45
135	0	135	0	135	0
90	45	90	45	90	45
135	0	135	0	135	0

The numbers in the figure on the left indicate the polarizer angles. Four polarizer angles are available: 0° , 45° , 90° , and 135° . Various polarization processing can be performed on the four pixels enclosed in the red frame as a block.

The number of effective pixels is 2464×2056 , and polarizers angled at 90° and 45° are provided alternately for each pixel on the first line. Polarizers angled at 135° and 0° are provided alternately for each pixel on the second line.

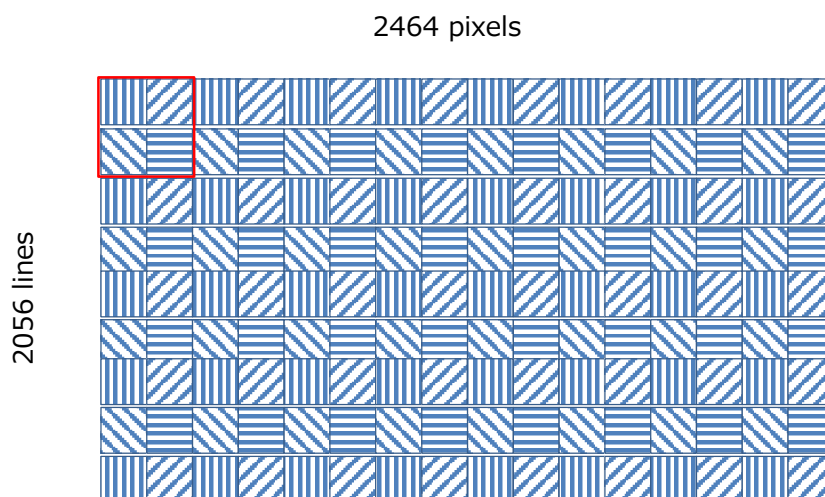

■ RawImage mode

The data output from the image sensor is output as is from the camera.

As shown in the figure above, the data of the pixels where there are polarizers angled at 90° and 45° is output as the first line, and the data of the pixels where there are polarizers angled at 135° and 0° is output as the second line.


■ Polarize Angle And Degree mode

This mode calculates Polarize Angle and Polarize Degree in real time and outputs data.


Polarize Angle : The polarization angle producing the greatest luminance for a given pixel block.
 (also referred to as AoLP: The Angle of Linear Polarization)
 Intensity values assigned to pixels represent angles from 0 to 180°.
 8-bit output: 00000000 ~ 10110100
 10-bit output: 0000000000 ~ 1110000100

Polarize Degree : The proportion of polarized light contained within the total light falling on a pixel block.
 (also referred to as DoLP: The Degree of Linear Polarization)
 Intensity values represent proportions of polarized light from 0 to 100%.
 8-bit output: 00000000 to 11111111
 10-bit output: 0000000000 to 1111111111

As shown in the figure below, two polarimetric parameters of Polarize Angle and Polarize Degree are calculated for a given pixel block and output from it.

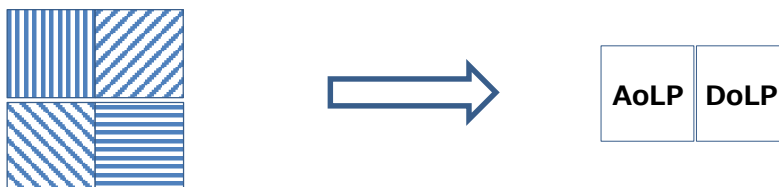

As shown below, AoLP and DoLP data are alternately output as a single line of data representing the first two lines from the image sensor. The number of lines of output data is 1028 lines, which is half of the number of sensor lines.

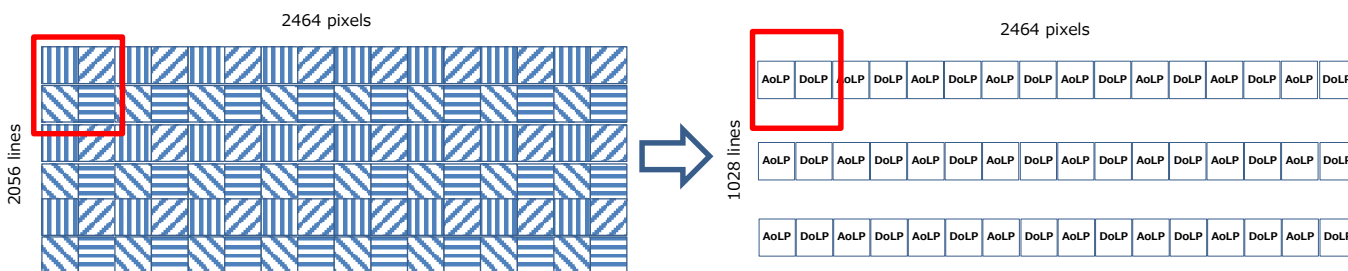

Binning Function

The binning function allows you to combine the signal values of clusters of adjacent pixels to create improved virtual pixels. Using the function results in images with lower pixel resolution and higher sensitivity.


This camera performs both horizontal binning and vertical binning via digital addition or averaging processing.

The following four conditions must be met to use the binning function.


1. [Polarize Image Selector] is [Raw Image] .
2. The ROI function and binning function cannot be used at the same time.
3. PixelFormat is one of Mono8, Mono10, and Mono10p.
4. [VideoProcessBypassMode] is [Off].

■ When horizontal binning only (2x1)

The signal values of the pixels having polarizers at the same angle are combined. The signal values of the two pixels indicated by the red frames in the following figure are combined.

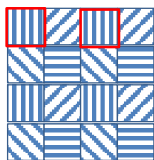


The image data output from this camera becomes RawImage with 1232 pixels (horizontally) x 2056 lines (vertically).

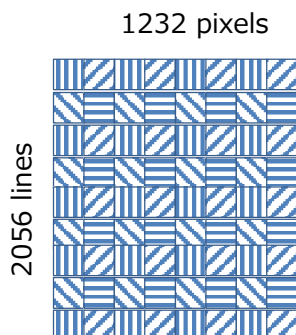


■ When vertical binning only (1x2)

The signal values of the pixels having polarizers at the same angle are combined. The signal values of the two pixels indicated by the red frames in the following figure are combined.

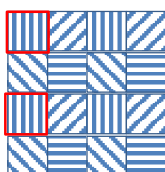


The image data output from this camera becomes RawImage with 2464 pixels (horizontally) x 1028 lines (vertically).

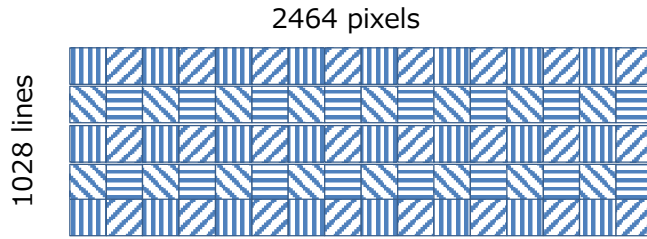


■ When horizontal and vertical binning (2x2)

The signal values of the pixels having polarizers at the same angle are combined. The signal values of the four pixels indicated by the red frames in the following figure are combined.

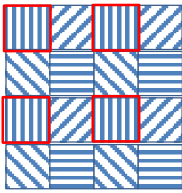

The image data output from this camera becomes RawImage with 1232 pixels (horizontally) x 1028 lines (vertically).

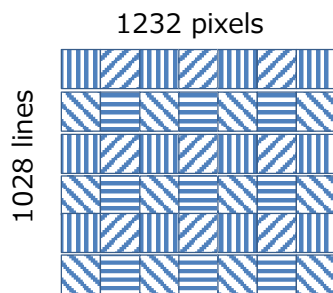


ROI (Regional Scanning Function)

The ROI (region of interest) function allows you to output images by specifying the areas to scan.

*) This function works Raw Image mode only.

ROI Settings

Specify the area to scan by specifying width, height, and horizontal/vertical offset values under [ImageFormatControl].

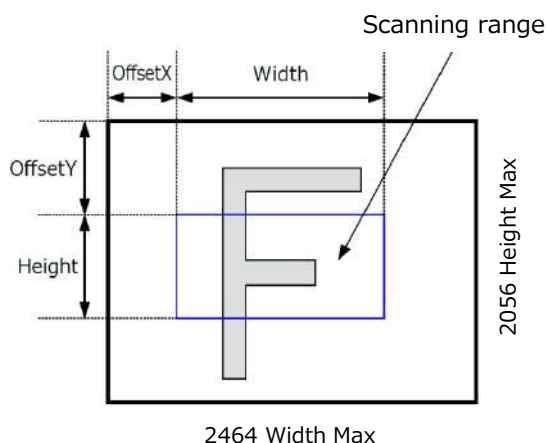

You can increase the frame rate by specifying a lower height, as the number of lines scanned decreases. The setting ranges for the ROI function's readable area based on the Binning setting (BinningHorizontal, BinningVertical) are as follows.

Width (pixels)	Height (pixels)
16 to 2464, 16 pixels / step	4 to 2056, 2 lines / step
Offset X (pixels)	Offset Y (pixels)
0 to 2448, 16 pixels / step	0 to 2052, 2 lines / step

Image Acquisition Controls

Perform operations and configure settings related to image acquisition in [AcquisitionControl].

The following acquisition modes are available on the camera.

AcquisitionMode	Description
SingleFrame	Acquire a single frame when the [AcquisitionStart] command is executed.
MultiFrame	Acquire the number of frames specified in [AcquisitionFrameCount] when the [AcquisitionStart] command is executed.
Continuous	Acquire images continuously until the [AcquisitionStop] command is executed.

Changing the Frame Rate


When [TriggerMode] is disabled, you can change the frame rate in [AcquisitionFrameRate].

Note

- The shortest frame period varies depending on the ROI, pixel format, and binning mode selected. The longest frame period is 0.125 Hz (8 sec.).
- When TriggerMode[FrameStart] is enabled, the [AcquisitionFrameRate] setting is disabled.

Maximum Frame Rate

The maximum frame rate is the smaller value between the SensorFR that is calculated from the readable range of the sensor and the InterfaceFR that is limited by the GigE bandwidth.

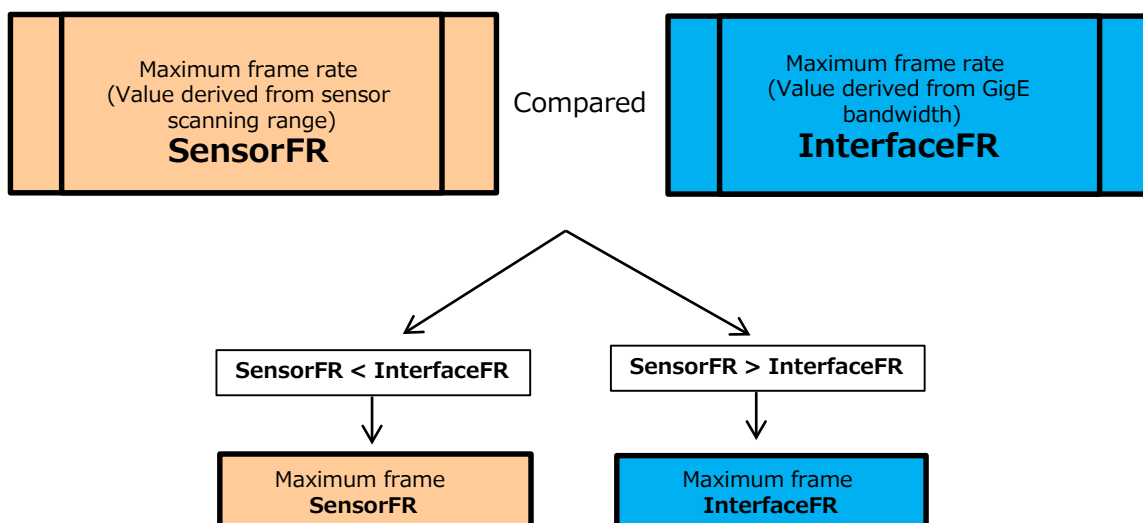

■ About H_Period, Pack value

H_Period and Pack value are the below.

PixelFormat	H_period (us)
Mono8	13.414
Mono10 Packed, Mono12 Packed	26.343
Mono10, Mono12	26.343

PixelFormat	Pack Value
Mono8	8
Mono10 Packed, Mono12 Packed	12
Mono10, Mono12	16

■ During continuous operation ([Frame Start] trigger is [Off] or [Exposure Mode] is [Off])

- Maximum frame rate of sensor output

$$\text{SensorFR} = 1 / \{ \text{Hperiod} \times (\text{Height} + 40) \}$$
- Maximum frame rate by interface

$$\text{InterfaceFR} = 920 \times 1000000 / (\text{Height} \times \text{Width} \times \text{Pack value})$$
- Maximum frame rate

$$\text{FR_Cont} = \text{Min} (\text{<Sensor FR>, <Interface FR> })$$

When the exposure time is longer than the frame interval

- Maximum exposure time at maximum frame rate

$$\text{MaxExposureTime_TrOlr} = (1 / \text{FR_Cont}) - (14 \times \text{H Period})$$
- Exposure time outside of frame interval

$$\text{NonOverlapExposureTime} = \text{ExposureTime} - \text{MaxExposureTime_TrOlr}$$

However, NonOverlapExposureTime calculation results that are 0 or below will be considered as 0.
- Maximum frame rate

$$\text{FR_ContLongExposure} = 1 / \{ (1 / \text{FR_Cont}) + \text{NonOverlapExposureTime} \}$$

■ When [Frame Start] trigger is [On] and [Trigger OverLap] is [Readout]

- Maximum frame rate of sensor

$$\text{Sensor FR} = 1 / \{ \text{H Period} \times (\text{Height} + 40) \}$$
- Maximum frame rate by interface

$$\text{Interface FR} = 920 \times 1000000 / (\text{Height} \times \text{Width} \times \text{Pack value})$$
- Maximum frame rate

$$\text{FR_Cont} = \text{Min} (\text{<Sensor FR>, <Interface FR> })$$
- Exposure time possible within frames

$$\text{MaxOverlapTime_TrOloff} = (1 / \text{FR_Cont}) - (14 \times \text{H Period})$$
- Exposure time outside of frame interval

$$\text{NonOverlapExposureTime_TrOloff} = \text{ExposureTime} - \text{MaxOverlapTime_TrOloff}$$

However, NonOverlapExposureTime_TrOloff calculation results that are 0 or below will be considered as 0.
For TriggerWidth, the trigger pulse is equivalent to ExposureTime.
- Maximum frame rate

$$\text{FR_TrOloff} = 1 / \{ (1 / \text{FR_Cont}) + \text{NonOverlapExposureTime_TrOloff} \}$$

■ When [Frame Start] trigger is [On] and [Trigger OverLap] is [Readout]

- Maximum frame rate of sensor
Sensor FR = $1 / \{H_Period \times (Height + 36)\}$
- Maximum frame rate by interface
Interface FR = $920 \times 1000000 / (Height \times Width \times Pack \text{ value})$
- Maximum frame rate
FR_Cont = Min (<Sensor FR>, <Interface FR>)
- Exposure time possible within frames
MaxOverlapTime_TrOlrD = $(1 / FR_Cont) - (14 \times H \text{ Period})$
- Exposure time outside of frame interval
NonOverlapExposureTime_TrOlrD = ExposureTime - MaxOverlapTime_TrOlrD
However, NonOverlapExposureTime_TrOlrD calculation results that are 0 or below will be considered as 0.
For TriggerWidth, the trigger pulse is equivalent to ExposureTime.
- Maximum frame rate
FR_TrOlrD = $1 / \{(1 / FR_Cont) + NonOverlapExposureTime_TrOlrD\}$

Caution

Although the maximum frame rate value is determined by the GigE bandwidth range, when ROI is configured, the frame rate cannot exceed the sensor output's allowable frame rate value.

ExposureMode

The following exposure modes are available on the camera.

ExposureMode	Description
Off	Exposure control is not performed (free-running operation).
Timed	Mode in which control is performed using exposure time. Acquire images using an exposure time configured beforehand on an external trigger.
TriggerWidth	Mode in which control of the exposure time is performed using the pulse width of the trigger input signal. The exposure time will be the same as the pulse width of the trigger input signal. This allows long exposure.

* The settings for exposure control and triggers are related to each other. Be sure to configure the settings described in "Trigger Control".

Actual Exposure Times

The shortest exposure times that can be configured are as follows.

ExposureMode	Shortest exposure time
Timed	14.7 us (8bit)
TriggerWidth	14.7 us (8bit)

- The actual exposure time will consist of the image sensor's offset duration (13.73 μs) added to the setting configured on the camera.
- When [ExposureMode] is set to [Timed] and the exposure time is set to 1 μs, the actual exposure time will be as follows.
 $1 \mu\text{s} + 13.7 \mu\text{s} \text{ (offset duration of image sensor)} = 14.7 \mu\text{s}$
- When [ExposureMode] is set to [TriggerWidth], the exposure is slightly longer than the width of the trigger signal. To achieve an exposure time of 14.7 μs and the exposure time offset is 13.7 μs, use $14.7 \mu\text{s} - 13.7 \mu\text{s} = 1 \mu\text{s}$ as the high or low time for the trigger signal.

Trigger Control

The camera allows the following controls to be performed via external trigger signals.

TriggerSelector	Description
FrameStart	Start exposure in response to the external trigger signal input. Select this to perform exposure control using external triggers.
AcquisitionStart	Start image acquisition in response to the external trigger signal input.
AcquisitionEnd	Stop image acquisition in response to the external trigger signal input.
AcquisitionTransferStart	Output acquired images at a specified timing in response to an external trigger signal input. * There is a limit to the number of image frames that can be stored internally. The limits for each image format are as follows. Acquired images must be output to avoid exceeding these limits. 8 bit: Up to 7 frames 10 bit: Up to 3 frames 12 bit: Up to 3 frames

- The settings for exposure control and triggers are related to each other. Be sure to configure the settings described in "ExposureMode" .

Shortest Repetition Period for Triggers

The reciprocal of the maximum frame rate is the time required to output one frame. The shortest repetition periods for triggers cannot be lower than that value.


Scanning range	Shortest period of trigger		
	8bit	10bit packed	10bit
Full	44.1 ms	66.1 ms	88.1 ms
ROI 2/3 (Height = 1370)	29.4 ms	44.1 ms	58.7 ms
ROI 1/2 (Height = 1028)	22.0 ms	33.1 ms	44.1 ms
ROI 1/4 (Height = 514)	11.0 ms	16.6 ms	22.1 ms
ROI 1/8 (Height = 256)	5.52 ms	8.27 ms	11.0 ms
Binning Vertical 2	28.2 ms	55.3 ms	55.3 ms

The above table indicates the shortest trigger periods for when [TriggerOverLap] is set to [Readout]. When [TriggerOverLap] is set to [Off], even when the exposure time is shorter than the frame period, the cycle may be extended.

■ When [ExposureMode] is [Timed]

Example: When [TriggerSource] is set to [Line 5 - OptIn1] and [OptInFilterSelector] is set to [10 μs]


- TriggerOverlap : Off

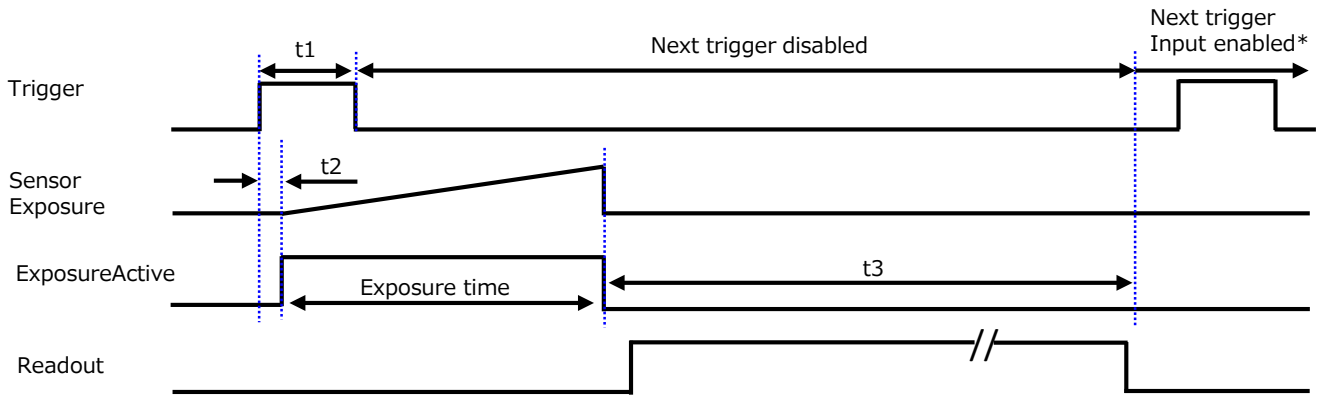

	t1	t2	t3(minimum)
8 bit	10 μs (minimum)	40 μs	28 ms
10 bit packed		79 μs	55 ms
10 bit			

*) If the exposure time is longer than (input trigger cycle - t3), the next trigger input will not be accepted.

• TriggerOverlap : readout

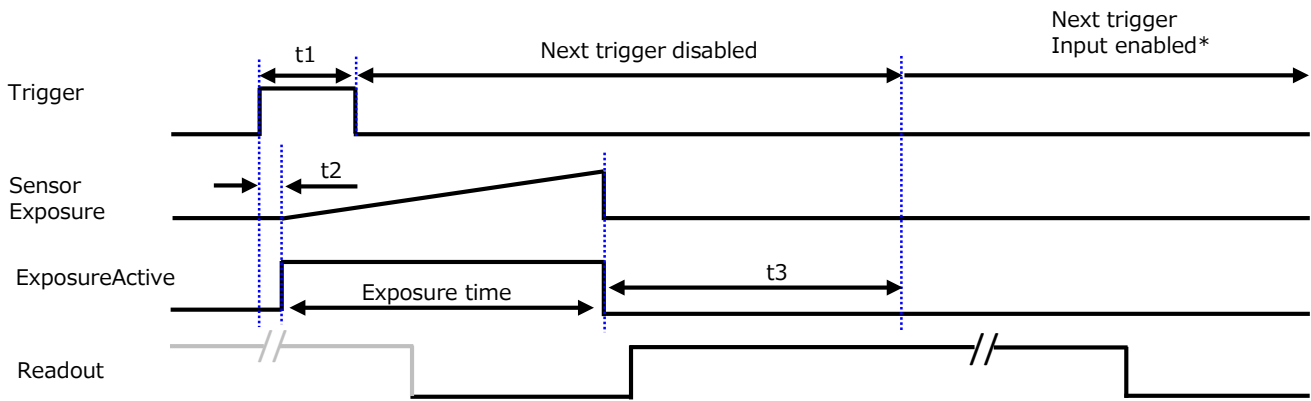


	t1	t2	t3(minimum)
8 bit	10 μ s (minimum)	40 μ s	173 μ s
10 bit packed		79 μ s	328 μ s
10 bit			

*) If the exposure time is longer than (input trigger cycle - t3), the next trigger input will not be accepted.

■ When [ExposureMode] is [TriggerWidth]

Example: When [TriggerSource] is set to [Line 5 - Optical In 1] and [OptInFilterSelector] is set to [10 μs]


- TriggerOverlap : Off

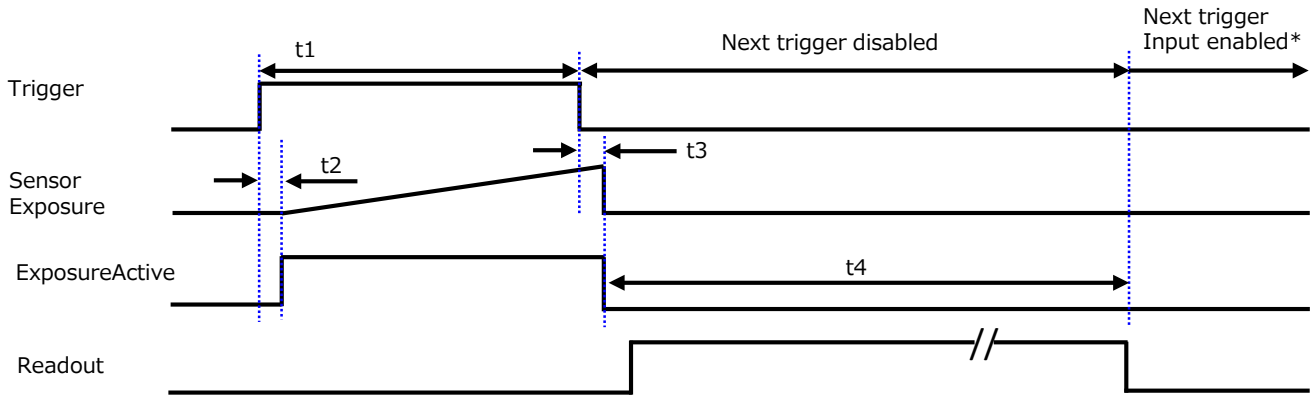

	t1	t2	t3	t4(minimum)
8 bit	10 μs (minimum)	40 μs	40 μs	28 ms
10 bit packed		79 μs	79 μs	55 ms
10 bit				

*) If the exposure time is longer than (input trigger cycle - t_4), the next trigger input will not be accepted.

• TriggerOverlap : readout

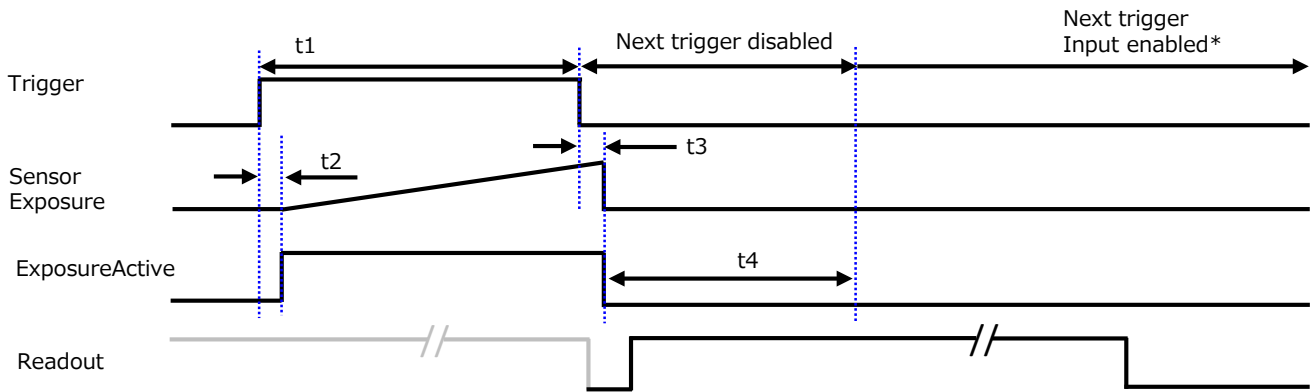


	t1	t2	t3	t4(minimum)
8 bit	10 μ s (minimum)	40 μ s	40 μ s	173 μ s
10 bit packed		79 μ s	79 μ s	328 μ s
10 bit				

*) If the exposure time is longer than (input trigger cycle - t4), the next trigger input will not be accepted.

Gain Control

Adjust the [AnalogAll] (master gain) setting.

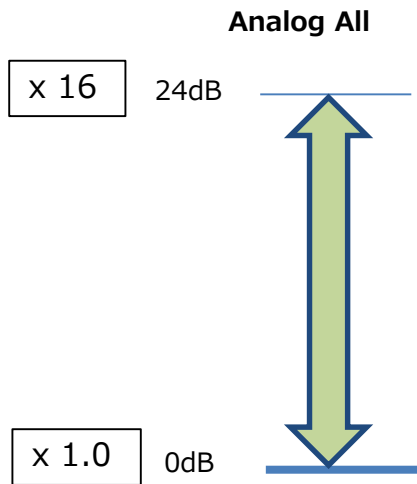

LineStatus

The line status function allows you to verify the status of external input/output signals. You can verify the status of the following signals.

- Opt Out 1, Opt Out 2, Opt In 1
- Time Stamp Reset
- NAND 0 In 1, NAND 0 In 2, NAND 1 In 1, NAND 1 In 2

Blemish Compensation

Multiple defective pixels that are not adjacent to each other can occur on conventional CMOS sensor cameras.

This camera features a function that interpolates defective pixels using the surrounding pixels. Up to 256 pixels can be corrected for each of the three sensors. Pixel interpolation can be performed via automatic detection or point-by-point manual settings.

■ Automatic detection

Automatic detection can only detect lit defective pixels (i.e., white blemishes).

1 Shield the camera sensor.

If a lens is attached, use the lens cap as a shield, for example.

2 Configure the threshold level for defective pixel detection.

Up to 256 pixels can be corrected.

The threshold value is specified as a percentage.

The default setting is "10" with 10% of the full scale (100%) specified as the threshold value.

3 Execute [BlemishDetect] to start automatic detection.

After detection, the interpolation data is saved to the camera's internal memory.

To check the number of interpolated pixels after automatic detection

You can check the number of pixels interpolated via automatic detection by loading the BlemishNum data.

■ Manual configuration

1 Select the index in [BlemishCompensationIndex].

You can select from 0 to 255. However, configure the indexes in order starting with the smallest index. If you skip indexes while configuring settings, interpolation may not be performed.

2 Specify the pixel points for interpolation using the [BlemishCompensationPositionX] and [BlemishCompensationPositionY] settings.

You can configure values that are within the total effective pixel area. Specify pixels for which interpolation is not necessary as -1. If 0 is specified, the first line or first pixel will be interpolated.

Note

BlemishCompensationDataClear[BlemishCompensationIndex], you can return a specific pixel correction setting to the default value (storage not required).

3 Execute [BlemishStore].

Blemish compensation data will be stored.


4 Set [BlemishEnable] to [True], and execute interpolation.

If it is set to [False], Blemish compensation is not effective.

Shading Correction

The shading correction is a function that corrects non-uniformity (i.e., shading) in the amount of light generated by the lens and lighting equipment. Using this function allows correction even if top, bottom, left, and right shading is not symmetrical in relation to the center of the screen (H, V).


The size of the correction block is 20 (H) × 17 (V) blocks and calculation errors in the correction data are minimized due to the small interpolation block. Each block is 128 × 128 pixels. The total size of the blocks is 2560 (H) × 2176 (V), but the actual number of effective pixels for the camera is 2464 (H) × 2056 (V). The ineffective peripheral areas will be deleted internally on the camera automatically.

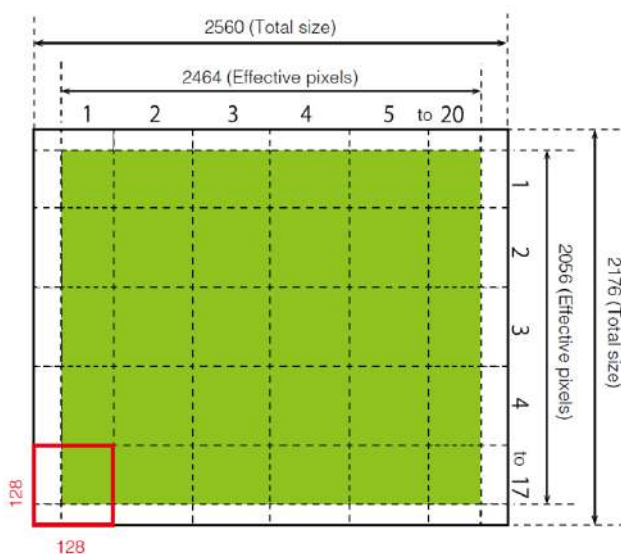

The following shading correction mode is available on the camera.

■ FlatShading

Correction is performed using the area of the screen with the highest brightness level as the reference, and adjusting the brightness levels of the other areas to match this level.

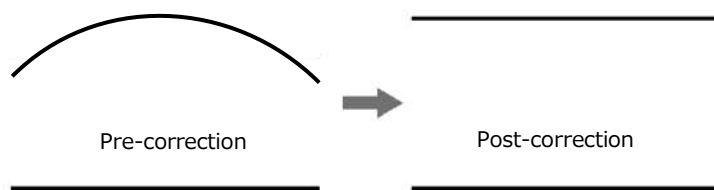

Caution

Proper correction is not possible under the following conditions.

- If an area with a brightness level that is more than 30% less than the reference level exists within the screen
- If the brightness level is saturated in parts or all of the screen
- If the area in the screen with the highest brightness level is 300 LSB or less (during 10-bit video output)

■ To use the shading correction function

Configure the settings as follows.

Item	Setting value	Description
ShadingCorrectionMode	FlatShading	Select the shading correction mode.
ShadingMode	User1, User2, User3, Off	Select the user area to which to save the shading correction value.

Display a white chart under a uniform light, and execute [PerformShadingCalibration].

Note

After shading correction is executed, the shading correction value is automatically saved to the user area selected in [ShadingMode].

Delayed Readout

Delayed readout allows images captured by a [FrameStart] trigger command to be stored temporarily inside the camera (delayed readout buffer) and read out using a [AcquisitionTransferStart] trigger after capture. This function is useful when executing triggers simultaneously on multiple cameras.

Note

This function imposes a heavy processing load on the network bandwidth, as images from multiple cameras are read out simultaneously. The number of frames that can be stored for delayed readout depends on PixelFormat.

For details, see "Trigger Control" .

PTP (Precision Time Protocol) Function

The camera can work as the slave for Precision Time Protocol defined in IEEE 1588. When the IEEE 1588 master clock exists in the network where the camera is connected, this function synchronizes the camera to the time of the master clock.

- Transport to be used
 - Multicast UDP datagram (224.0.1.129)
 - (However, Delay_Resp is a unicast UDP datagram.)
- Destination port number
 - 319 : Sync, Delay_Req, Pdelay_Req, Pdelay_Resp
 - 320 : Announce, Follow_Up, Delay_Resp, Pdelay_Resp, Management, Signaling
- Items for synchronization
 - Time synchronization is performed. Frequency tuning is not performed.
- PTP time data
 - 80 bit (elapsed time in 1 ns, with 00:00:00, January 1 1970 set as the origin)
- Timestamp (this camera)
 - 64 bit* (PTP synchronization: LSB64bit* of PTP time data)
- Supported PTP messages
 - Announce message (receive only), Sync message (receive only),
 - Follow_Up message (receive only), Delay_Req message (send only),
 - Delay_Resp message (receive only)


Cautions

- The Timestamp Tick Frequency register value is fixed at 1,000,000,000 (1 GHz).
- When PTP synchronization is being performed, the Timestamp Reset function is disabled.
- Because GenICam treats the timestamp (64 bit) as a 64 bit signed integer, 63 bit is actually timestamp data without the sign bit.

CounterAndTimerControl Function

The counter function counts up change points in the camera's internal signals using the camera's internal counter, and reads that information from the host side. This function is useful for verifying error conditions via the count value using internal camera operations. Counting is performed at frame trigger, frame start, exposure start, and exposure transfer end, and by comparing these values, you can determine the internal camera state at which missed triggers will occur.


■ Counter occurrence diagram

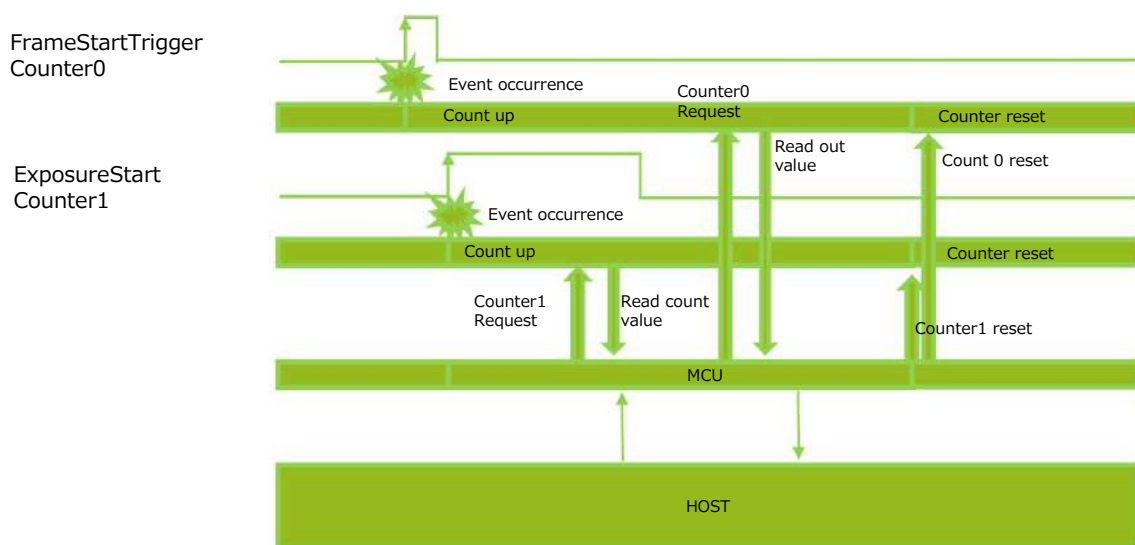

Note

You can reset a specific counter's count value by executing `CounterReset[Counter0, Counter1, Counter2]`.

Internal camera blocks

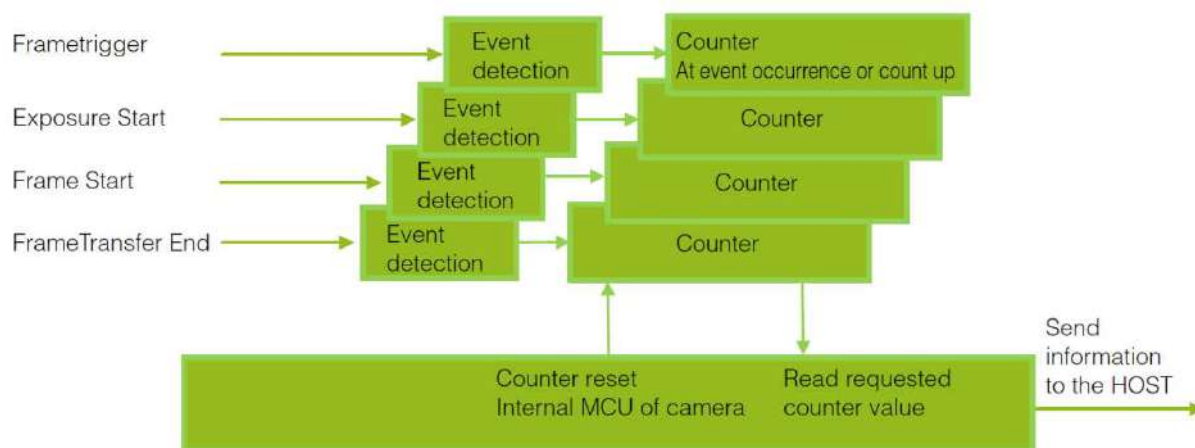

To use the counter function

Configure the settings as follows.
Three counters can be configured (Counter 0 to 2).

Item	Setting value / selectable range	Description
Counter 0 to 2	Counter 0 to 2	Select the counter.
Counter 0 to 2 Event Source	Off, Frame Trigger, Frame Start, Exposure Start, Exposure Transfer End	Select the counter event signal for which to read the count value.
Counter 0 to 2 Event Activation	Rising Edge or Falling Edge	Specify the timing at which to count.

* The three counter event signals are always counted up internally on the camera.

Video Process Bypass Mode

The video process bypass mode is a function that bypasses internal video processing on the camera. When bypass is enabled, the sensor output and camera output data can be set to the same bit width. Operation using 12-bit outputs must be performed in bypass mode.


Functions disabled in Video Process Bypass mode
BlackLevel, Shading, Binning(H, V)

PixelFormat available only in Video Process Bypass mode
Mono12, Mono12Packed

Event Control Function

The Event Control Function is a function that outputs a signal change point inside the camera as information indicative of an event occurrence (event message) by using GVCP (GigE Vision Control Protocol).

■ Flow from detecting an event to sending an event message

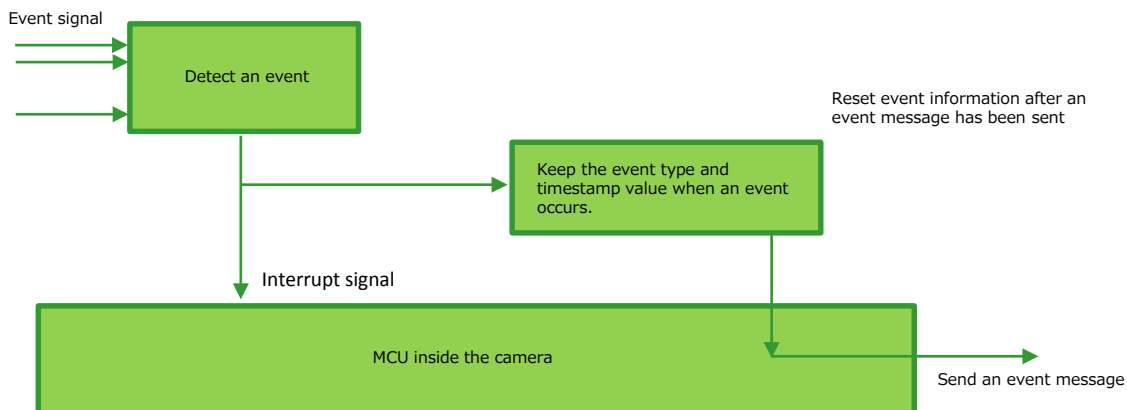

■ Events that can use the Event Control Function

Events that can use the Event Control Function are as follows. You can specify whether or not to send an event message when an event occurs at each event.

AcquisitionTrigger,	FrameEnd,
FrameStart,	Jai FVAL End,
Jai FVAL Start,	Exposure End,
Exposure Start,	Line2RisingEdge,
OptOut1RisingEdge,	Line3RisingEdge,
OptOut2RisingEdge,	Line5RisingEdge,
OptIn1RisingEdge,	Line2FallingEdge,
OptOut1FallingEdge,	Line3FallingEdge,
OptOut2FallingEdge,	Line5FallingEdge,
OptIn1FallingEdge,	

Action Control Function

The Action Control Function is a function that executes the pre-configured action when the camera receives action commands. Action commands can send both unicast and broadcast messages and give instructions for actions to multiple cameras simultaneously by broadcasting them. A camera that has this function can even give instructions for actions to different types of multiple cameras. Although this function includes jitter and delays, it is useful for controlling multiple cameras simultaneously.

Actions are performed when the following three conditions are met.

1. ActionDeviceKey set to the camera and ActionDeviceKey in the action command match
2. ActionGroupKey set to the camera and ActionGroupKey in the action command match
3. ActionGroupMask set to the camera and GroupMask in the action command perform AND operation, and the result is not 0.

■ About the settings of the camera

1. Specify ActionDeviceKey.
2. Then, specify two actions that can be configured on the camera.
 - Action1
 - Select 1 in ActionSelector.
 - Specify ActionGroupMask [ActionSelector].
 - Specify ActionGroupKey [ActionSelector].
 - Action2
 - Select 2 in ActionSelector.
 - Specify ActionGroupMask [ActionSelector].
 - Specify ActionGroupKey [ActionSelector].
3. Set triggers (AcquisitionStart, AcquisitionEnd, FrameStart, AcquisitionTransferStart) to Action1 and Action2.

■ Setting example

Assume that the following settings have been pre-configured on the camera.

```

ActionDeviceKey : 0x00001001
ActionGroupMask[1] : 0x00000011
ActionGroupKey[1] : 0x00000001
ActionGroupMask[2] : 0x00000111
ActionGroupKey[2] : 0x00000002
  
```

When the camera receives action commands (ActionDeviceKey:0x00001001, ActionGroupMask:0x00000011, ActionGroupKey: 0x00000002), Action2 is executed.

When the camera receives action commands (ActionDeviceKey:0x00001001, ActionGroupMask:0x00000011, ActionGroupKey: 0x00000001), ActionDevice and ActionGroupKey[1] match. However, the result of AND operation performed by ActionGroupMask is 0. Therefore, in this case, neither Action1 nor Action2 is executed.

Settings List

Feature Properties

Item	Setting range	Default value	Description
a) Device Control			Display/configure information related to the device.
Device Vendor Name	—	"JAI Corporation"	Display the manufacturer name.
Device Model Name	—	GO-5100MP-PGE	Display the model name.
Device Manufacturer Info	—	See the possibilities	Display the manufacturer information.
Device Version	—	—	Display the hardware version.
Device Firmware Version	—	—	Display the firmware version.
Device Serial Number	—	—	Display the device ID.
Device User ID	Any	—	Set the user ID (16bytes) for the camera.
Device Temperature in degrees Celsius	—	—	Display the internal temperature (°C) of the camera.
Device Reset	—	—	Reset the device. (After the camera receives this command, it returns an ACK response. Then, execute reset.)
Item	Setting range	Default value	Description
b) Image Format Control			Configure image format settings.
Sensor Width	2464	2464	Display the maximum image width.
Sensor Height	2056	2056	Display the maximum image height.
Sensor Digitization Taps	Twelve	Twelve	Number of digitized samples outputted simultaneously by the image sensor.
Width Max	2464	2464	Display the maximum image width.
Height Max	2056	2056	Display the maximum image height.
Width	BinningHorizontal 1: 16 to 2464 step 16 BinningHorizontal 2: 1232 (Fixed)	2464	Set the image width.
Height	BinningVertical 1: 4 to 2056 step 2 BinningVertical 1: 1028 (Fixed)	2056	Set the image height.
Offset X	BinningHorizontal 1: 0 to 2448 step 16 BinningHorizontal 2: 0 (Fixed)	0	Set the horizontal offset.
Offset Y	BinningVertical 1: 0 to 2052 step 2 BinningVertical 1: 0 (Fixed)	0	Set the vertical offset.
Binning Horizontal Mode	Sum, Average	Sum	Set the addition process to be used during horizontal binning.
Binning Horizontal	1,2	1	Set the number of pixels in the horizontal direction for which to perform binning.
Binning Vertical Mode	Sum, Average	Sum	Display the addition process to be used during vertical binning.
Binning Vertical	1,2	1	Set the number of pixels in the vertical direction for which to perform binning.
Pixel Format	Mono8, Mono10, Mono10Packed, Mono12, Mono12Packed	Mono8	Set the pixel format. The following mode are enabled when [VideoProcessBypassMode] is set to [On]. Mono12, Mono12Packed
Test Pattern	Off, GreyHorizontalRamp, GreyVerticalRamp, GreyHorizontalRampMoving	Off	Select the test image.

Item	Setting range	Default value	Description
c) Acquisition Control			Configure image capture settings.
Acquisition Mode	Single Frame, Multi Frame, Continuous	Countinuous	Select the image capture mode.
Acquisition Start	—	—	Start image capture.
Acquisition Stop	—	—	Stop image capture.
AcquisitionFrameCount	1 to 255	1	In [MultiFrame] mode, set the number of frames to capture.
AcquisitionFrameRate(Hz)	0.125 to 22.7004	22.7004	Set the frame rate as a frequency. (unit: Hz) The maximum value varies depending on the PixelFormat and ROI settings.
Trigger Selector	Acquisition Start, Acquisition End, Frame Start, JAI Acquisition Transfer Start	Frame Start	Select the trigger operation.
Trigger Mode	Off, On	Off	Select the trigger mode.
Trigger Software	—	—	Execute a software trigger.
Trigger Source	—	Line 5	Select the trigger signal source. [Setting range] Low, High, Software, Pulse Generator0, User Output 0, User Output 1, Action1, Action2, Line5, NAND0, NAND1
Trigger Activation	Rising Edge, Falling Edge Level High, Level Low	Rising Edge	Select the polarity of the trigger signal (i.e., location of signal at which trigger is applied).
Trigger Overlap	Off, ReadOut	Off	Select the trigger overlap operation.
Trigger Delay (μs)	0 to 500000	0	Set the time to delay the trigger.
ExposureMode	Off, Timed, Trigger Width	Timed	Select the exposure mode.
ExposureTime	8-bit: 1 to 7999812 10-/12-bit: 1 to 7999631	43864	Set the exposure time. The specifiable range varies depending on the [Start Trigger Mode] and [Pixel Format] setting.
ExposureAuto	Off, Continuous	Off	Set whether to enable auto exposure.
Item	Setting range	Default value	Description
d) Event Control			Configure event control settings.
Event Selector	—	AcquisitionTrigger	Select the event for which to send notifications. [Setting range] AcquisitionTrigger, FrameStart, FrameEnd, Jai FVAL Start, Jai FVAL End, Exposure Start, Exposure End, OptOut1RisingEdge, Line2RisingEdge, OptOut2RisingEdge, Line3RisingEdge, OptIn1RisingEdge, Line5RisingEdge, OptOut1FallingEdge, Line2FallingEdge, OptOut2FallingEdge, Line3FallingEdge, OptIn1FallingEdge, Line5FallingEdge,
Event Notification	Off, On	Off	Select whether to output event messages.

Item	Setting range	Default value	Description
e) Analog Control			Configure analog control settings.
Gain Selector	Analog All	Analog All	Select the gain to configure.
Gain	x1.0 to x16.0	x1.0	Set the gain value for the gain setting selected in [GainSelector].
Black Level Selector	Digital All	Digital All	Select the black level to configure.
Black Level	-133 to 255	0	Set the black level value.
GainAuto	Off, Continuous	Off	Enable/disable gain auto adjustment.
Item	Setting range	Default value	Description
f) Digital I/O control			Configure settings for digital input/output.
Line Selector	Line2, Line3, Line5, TimeStampReset, Nand0_In_1, Nand0_In_2, Nand1_In_1, Nand1_In_2	Line2	Select the input/output to configure.
Line Source	Low, High, Acquisition Trigger Wait, Acquisition Active, Frame Trigger Wait, Frame Active, Exposure Active, JAIFVAL, JAILVAL, UserOutput0, UserOutput1, OptIn1, JAIPulseGenerator0, Nand0, Nand1,	Low	Select the line source signal for the item selected in [LineSelector].
Line Inverter	True, False	False	Enable/disable polarity inversion for the selected input signal or output signal.
Line Status	True, False	—	Display the status of the input signal or output signal (True: High, False: Low).
Line Mode	Input, Output	—	Display the input/output status (whether it is input or output).
Line Format	—	Opto Coupled	Display the signal format.
Line Status All	—	0x0	Display the input/output signal status. The state is shown with 16 bits. Bit assignments are as follows. [0] (unused) [1] Line2 - OptOut1 [2] Line3 - OptOut2 [3] (unused) [4] Line5 - Opt In 1 [5], [6], [7], [8], [9], [10] (unused) [11] Time Stamp Reset [12] NAND Gate 0 In 1 [13] NAND Gate 0 In 2 [14] NAND Gate 1 In 1 [15] NAND Gate 1 In 2
User Output Selector	User Output 0 User Output 1	User Output 0	Set the UserOutput signal.
User Output Value	True, False	False	Set the value for the UserOutput selected in [UserOutputSelector].

Item	Setting range	Default value	Description
g) PulseGenerator			Configure pulse generator settings.
Clock Pre Scaler	1 to 4096	165	Set the division value for the prescaler (12 bit) using PixelClock as the base clock.
Pulse Generator Clock (MHz)	0.0181274 to 74.25	0.45	Set the clock used for the pulse generator. This value is calculated using the [ClockPreScaler] value as a base.
Pulse Generator Selector	Pulse Generator 0	Pulse Generator 0	Select the pulse generator.
Pulse Generator Length	1 to 1048575	30000	Set the maximum count-up value as a clock count.
Pulse Generator Length (ms)	0.002222222 to 2330.17	66.6667	Set the maximum count-up value in milliseconds. This value is calculated using the [PulseGeneratorLength] value as a base. The setting range varies depending on the [ClockPreScaler] value.
Pulse GeneratorFrequency (Hz)	0.429154 to 450000	15	Set the maximum count-up value as a frequency. This value is calculated using the [PulseGeneratorLength] value as a base.
Pulse Generator Start Point	0 to 1048574	0	Set the start point of the High interval as a clock count. When the counter reaches this value, the output will be 1.
Pulse Generator Start Point (ms)	0 to 2330.16	0	Set the start point of the High interval in milliseconds. When the counter reaches this value, the output will be 1. The setting range varies depending on the [ClockPreScaler] value.
Pulse Generator End Point	1 to 1048575	15000	Set the start point of the Low interval as a clock count. When the counter reaches this value, the output will be 0.
Pulse Generator End Point (ms)	0.002222222 to 2330.17	33.3333	Set the start point of the Low interval in milliseconds. When the counter reaches this value, the output will be 0. The setting range varies depending on the [ClockPreScaler] value.
Pulse Generator Pulse Width (ms)	-1.79769e+308 to 1.79769e+308	33.3333	Display the High interval width of the pulse in milliseconds. The duration between the Start Point and End Point is calculated. The setting range varies depending on the [ClockPreScaler] value.
Pulse Generator Repeat Count	0 to 255	0	Set the repeat count for the counter. When this is set to [0], a free counter is enabled with no repeat limit.
Pulse Generator Clear Activation	Off, HighLevel, LowLevel, RisingEdge, FallingEdge	Off	Set the clear signal condition for the count clear input of the pulse generator.
Pulse Generator Clear Source	—	Low	Select the count clear input signal source. [Setting range] Low, High, AcquisitionTriggerWait, FrameTriggerWait, FrameActive, ExposureActive, JAIFVAL, JAILVAL, UserOutPut0, UserOutPut1, Action1, Action2, Line5, Nand0, Nand1
Pulse Generator Clear Inverter	True, False	False	Select whether to invert the polarity of the count clear input signal.
Pulse Generator Clear Sync Mode	Async Mode, Sync Mode	Async Mode	Select the sync mode for the count clear input signal.

Item	Setting range	Default value	Description
h) TransportLayerControl			Display information on transport layer control.
PayloadSize		5065984	Display the payload size.
GevVersionMajor	—	2	Display the GigE version.
GevVersionMinor	—	0	
GevDeviceModeIsBigEndian	—	True	Display the endianness.
GevDeviceModeCharacterSet	—	UTF8	Display the character set.
GevInterfaceSelector	—	0	Set the interface.
GevMACAddress	—	—	Display the MAC address
GevSupportedOptionSelector	—	IPConfigurationLLA	Select the supported options for GigE Vision. [Setting Range] IPConfigurationLLA, IPConfigurationDHCP, IPConfigurationPersistentIP, StreamChannelSourceSocket, MessageChannelSourceSocket, CommandsConcatenation, WriteMem, PacketResend, Event, EventData, PendingAck, Action, ExtendedStatusCodes, DiscoveryAckDelay, DiscoveryAckDelayWritable, TestData, ManifestTable, CCPApplicationSocket, LinkSpeed, HeartbeatDisable, SerialNumber, StandardIDMode, IEEE1588Support, UnconditionalAction, ScheduledAction, PrimaryApplicationSwitchover, ExtendedStatusCodesVersion2_0, UserDefinedName, SingleLink, MultiLink, StaticLAG, DynamicLAG, PAUSEFrameReception, PAUSEFrameGeneration, StreamChannel0BigAndLittleEndian, StreamChannel0MultiZone, StreamChannel0PacketResendDestination, StreamChannel0AllInTransmission, StreamChannel0UnconditionalStreaming
GevSupportedOption	True, False	True	Enable/disable the supported options.
GevCurrentIPConfigurationLLA	True, False	True	Display whether the current IP configuration is calibrated by LLA (link-local address).
GevCurrentIPConfigurationDHCP	True, False	True	Select whether to set the IP configuration to DHCP.
GevCurrentIPConfigurationPersistentIP	True, False	True	Select whether to set the IP configuration to persistent IP.
GevCurrentIPAddress	—	—	Display the IP address.
GevCurrentSubnetMask	—	—	Display the subnet.
GevCurrentDefaultGateway	—	—	Display the default gateway.
GevFirstURL	—	—	Display the first URL.
GevSecondURL	—	—	Display the second URL.
GevNumberOfInterfaces	—	1	Display the number of interfaces.
GevPersistentIPAddress	—	—	Set the Persistent IP address.
GevPersistentSubnetMask	—	—	Set the Persistent subnet mask.
GevPersistentDefaultGateway	—	—	Set the Persistent default gateway.
GevMessageChannelCount	—	1	Display the message channel count.
GevStreamChannelCount	—	1	Display the stream channel count.
GevHeartbeatTimeout	500 to 2147483647	5000	Set the timeout value for heartbeat.
GevTimestampTickFrequency	—	1000000000	Display the timestamp frequency.
GevTimestampControlLatch	—	—	Latch the timestamp value.
GevTimestampControlReset	—	—	Reset the timestamp value.
GevTimestampValue	—	0	Display the timestamp value.
GevCCP	—	ControlAccess	Display the control channel privilege.
GevMCPHostPort	—	55348	The port to which the device must send messages. Setting this value to 0 closes the message channel.
GevMCDA	—	—	Message channel destination IPv4 address. The destination address can be a multicast or a unicast address.
GevMCTT	—	400	Message Channel Transmission Timeout in milliseconds.
GevMCRC	—	3	Number of retransmissions allowed on the message channel.
GevMCSP	—	55348	Source port number of message channel.
GevStreamChannelSelector	—	0	Select the stream channel.

GevSCPHostPort	—	55351	Set the port number for the stream channel.
GevSCPSDoNotFragment	True, False	True	Enable/disable "Do Not Fragment".
GevSCPSPacketSize	1476 to 16020	1476	Set the packet size.
GevSCPD	0 to 4000000	0	Set the packet delay.
GevSCDA	—	—	Set the destination IP address for the stream channel.
GevSCSP	—	0	Source port number of stream channel.
GevIEEE1588	True, False	False	Enable usage of the IEEE 1588 Precision Time Protocol to source the timestamp register.
GevIEEE1588Status	—	PTP Disabled	This optional register indicates the state of the IEEE 1588 clock. [Setting range] Stoped, Initializing, Faulty, Disabled, Listening, PreMaster, Master, Passive, Uncalibrated, Slave
Item	Setting range	Default value	Description
i) Action Control			Configure action control settings.
Action Device Key	—	—	Set the action device key.
Action Selector	1, 2	1	Select the action.
Action Group Key	—	0x0	Sete the key that executes action 1.
Action Group Mask	—	0x0	Set the mask value that creates the action 0 group.
Action Queue Size	—	255	Set the size of action queue.
Item	Setting range	Default value	Description
j) User Set Control			Configure user settings.
User Set Selector	Default, UserSet1, UserSet2, UserSet3	Default	Select the user settings.
User Set Load	0, 1, 2, 3	0	Load user settings. (If 0 is specified, the factory default setting is read.)
User Set Save	1,2,3	—	Save the current setting values as user settings.

Item	Setting range	Default value	Description
k) JAICustomControlALC			Configure JAI ALC settings. These settings are also used for AGC (auto gain control).
ALCReference	10 to 95	50	Set the target level for ALC. (unit: %)
ALCAreaSelector	—	Low Right	Select the area for which to configure [ALC Area Enable]. [Setting Range] Low Right, Low Mid-Right, Low Mid-Left, Low Left, Mid-Low Right, Mid-Low Mid-Right, Mid-Low Mid-Left, Mid-Low Left, Mid-High Right, Mid-High Mid-Right, Mid-High Mid-Left, Mid-High Left, High Right, High Mid-Right, High Mid-Left, High Left
ALCAreaEnable	True, False	True	Enable/disable the photometry area selected in [ALC Area Selector].
ALCAreaEnableAll	True, False	True	On: Operate ALC with all areas designated as photometry areas, regardless of the individual enabled/disabled photometry area states configured in [ALC Area Selector]. Off: Operate ALC according to the individual enabled/disabled photometry area states configured in [ALC Area Selector].
ASC Min	100 to 7999811	100	Set the minimum value for the Exposure Auto (ASC) control range.
ASC Max	101 to 7999812	43864	Set the maximum value for the Exposure Auto (ASC) control range.
AGC Min	100 to 1599	100	Set the minimum value for the Gain Auto (ASC) control range.
AGC Max	101 to 1600	1600	Set the maximum value for the Gain Auto (ASC) control range.
AGC/ASC ControlSpeed	1 to 8	4	Set the reaction speed for AGC/ASC. (8 is the fastest.)
ALC Status	—	Idle	Display the status of ALC. [Setting Range] Executing ASC, Executing AGC, Executing ASC and AGC, Executing AWB, Executing ASC and AWB, Executing AGC and AWB, Executing ASC and AGC and AWB, Convergent, Idle
Item	Setting range	Default value	Description
l) JAI Custom Control Blemish			Configure settings for JAI white blemish correction.
Blemish Enable	True, False	True	Enable/disable blemish correction.
Blemish Detect	—	—	Execute blemish detection.
Blemish Detect Threshold	0 to 100	10	Set the blemish detection threshold.
Blemish Compensation Index	0 to 255	0	Select the index for the target blemish coordinates (BlemishDataPosition X/Y).
Blemish Compensation PositionX	-1 to 2463	-1	Display the X coordinate (horizontal pixel position) of the target blemish selected in [BlemishCompensationIndex]. You can also manually enter the X coordinate of the blemish you want to correct.
Blemish Compensation PositionY	-1 to 2055	-1	Display the Y coordinate (vertical pixel position) of the target blemish selected in [BlemishCompensationIndex]. You can also manually enter the Y coordinate of the blemish you want to correct.
Blemish Compensation Number	—	0	Display the number of target blemishes.

Item	Setting range	Default value	Description
m) JAI Custom Control Shading			Configure shading correction settings.
Shading Correction Mode	Flat Shading	Flat Shading	Select the shading correction method.
Shading Mode	Off, User1, User2, User3	Off	Set the area to which to save shading correction data. When this is set to [Off], shading correction data is not saved.
Perform Shading Calibration	—	—	Execute shading correction.
Shading Detect Result	—	—	Display the shading correction results.
Item	Setting range	Default value	Description
n) Counter And Timer Control			Configure counter settings. (This camera only supports counter functions.)
Counter 0 to 2	Counter 0 to 2	—	Select the counter.
Counter 0 to 2 Event Source	Off, Frame Trigger, Frame Start, Exposure Start, Frame Transfer End	Off	Assign the counter event signal for which you want to read the count value to a dedicated counter, and read the value.
Counter 0 to 2 Event Activation	Rising Edge Falling Edge	—	Set the count timing.
Counter 0 to 2 Reset	—	—	Reset the counter.
Counter 0 to 2 Refresh	—	—	Update the count value.
Counter 0 to 2 Value	—	0	Display the count value.
Counter 0 to 2 Status	—	Counter Active	Display the counter status.
Item	Setting range	Default value	Description
o) JAICustomControlPolarized			Configure controlling polarization settings.
Polarize Image Selector	Raw Image, Polarize Angle And Degree	Raw Image	Set the video output mode
Item	Setting range	Default value	Description
p) JAICustomControlMisc			Configure settings for other JAI functions.
VideoProcessBypassMode	Off, On	Off	Enable/disable VideoProcessBypass mode.
Trigger Option	Off	Off	
OptIn Filter Selector	10 μ s, 100 μ s, 500 μ s, 1ms, 5ms, 10ms	10 μ s	Select the surge protection filter
Video Send Mode	Normal Mode	Normal Mode	Display the [VideoSendMode].

Miscellaneous

Troubleshooting

Check the following before requesting help. If the problem persists, contact your local JAI distributor.

■ Power supply and connections

Problem	Cause and solution
The POWER/TRIG LED remains lit amber and does not turn green, even after power is supplied to the camera.	Camera initialization may not be complete due to lack of a network connection. Check the 12-pin power cable connection.

■ Image display

Problem	Cause and solution
Gradation in dark areas is not noticeable.	Use the gamma function to correct the display. As the light-emitting properties of the monitor are not linear, the entire image may be darker or the gradation in the dark areas may be less noticeable when camera outputs are displayed without processing. Using the gamma function performs correction to produce a display that is close to linear. For details, see "Gamma Function".

■ Settings and operations

Problem	Cause and solution
Settings cannot be saved to user memory.	You cannot save to user memory while images are being acquired by the camera. Stop image acquisition before performing the save operation.
I want to restore the factory default settings.	Load [Default] under [User Set Selector] in the [Feature Properties] tab to restore the factory default settings.

Specifications

Item		GO-5100MP-PGE
Scanning system		Progressive scan, 1 tap
Synchronization		internal
Interface		1000BASE-T Ethernet (GigE Vision 2.0 compatible), IEEE 802.3af
Image sensor		monochrome CMOS image sensor with a four-directional polarization grid
Image size (effective image)		2/3-inch 8.5mm(H) x 7.09mm(V) : 11.1mm(diagonal)
Pixel size		3.45 μm (H) x 3.45μm(V)
Effective image pixel (Image sensor)		2464(H) x 2056(V)
Acquisition	8bit	Mono8
Frame Rate (max)	10/12bit Packed	Mono10Packed, Mono12Packed,
	12/12bit UnPacked	Mono10, Mono12
Full		2464(H) x 2056(V)
Digital image output format	ROI	Width
		Offset X
		Height
		Offset Y
Pixel Format		Mono8, Mono10, Mono10Packed, Mono12, Mono12Packed
Acquisition Mode		Continuous, Single Frame, Multi Frame (1 ~ 255)
Exposure Mode	Timed	14.7 μs (min) * ~ 8 s (max) variable unit : 1 μs * Performance verified for up to 1 second.
	Trigger Width	14.7 μs (min) * ~ ∞ s (max) variable unit : 1 μs * Performance verified for up to 1 second.
Trigger Selector	Acquisition	Acquisition Start, Acquisition Stop
	Exposure	Frame Start
	Transfer	Acquisition Transfer Start (delayed readout)
OptIn filter (for trigger noise)		5 steps (10 μs(Typ), 100 μs, 500 μs, 1ms, 5ms, 10ms)
Trigger overlap		Off, Read out
Trigger input signals		Line 5 (Opt In), Software, PG0, NAND Out 0/1, Action 1/2
Video send mode		Normal Mode, Delayed Readout
Digital I/O		Line Selector (6P) : GPIO IN / GPIO OUT
Gain adjustment		Manual adjustment range : 0dB ~ 24dB 1 step = x 0.01 (0.005dB~0.08dB;varies by setting value)
Black Level adjustment		Digital All 0 ~ 100 @10bit (0.25LSB/Step) - 33LSB ~ +64LSB against reference level (during 10bit output) Default level 33LSB@10bit
Test pattern		Available : Off, GreyHorizontalRamp, GreyVerticalRamp, GreyHorizontalRampMoving
Image processing		Shading correction: FlatShading
Blemish correction	Detection	Detect white blemishes using threshold values (black blemish correction performed only at factory)
	Correction	Interpolation using nearby pixels (continuous blemishes not corrected)
	Correctable pixels	256 pixels
Power supply	6-pin connector	Input range
		Power consumption
	PoE IEEE802.3at compatible	Input range
		Power consumption
Connectors / LEDs	RJ-45	GigE 1000BASE-T Ethernet cable : Cat5e, Cat6(recommended)
	6pin(DC IN/TRIG)	Model : HR-10A-7R-6PB (73) (or equivalent) Function: Power supply input, External trigger, External I/O
	Power/TRIG LED	Function: Power on, trigger input indicator
	ACT LED	Function: Indicates the network communication status
	LINK LED	Function: Indicates the link status of the network
Lens mount		C mount Lens mount protrusion length of 9 mm or less is supported
Flange back		17.526, tolerance: 0 mm ~ - 0.05 mm
Optical filter		none
Verified performance temperature / humidity		- 5°C ~ + 45°C / 20% ~ 80% (non-condensing)
Storage temperature / humidity		- 25°C ~ + 60°C / 20% ~ 80% (non-condensing)
Vibration resistance		10G (20 Hz ~ 200 Hz X-Y-Z direction)
Impact resistance		80G
Regulations		CE (EN61000-6-2 and EN61000-6-3), FCC part 15 class B, RoHS, WEEE
Dimensions (housing)		29 x 29 x 41.5 mm (W×H×D) (excluding mount protrusions)
Weight		46 g

*) The actual exposure time will be consist of the image sensor's offset duration (13.7 μs) added to the setting configured on the camera.

Package contents

Camera
body (1)
Sensor protection cap (1)
Dear Customer (sheet) (1)

Optional accessories (not supplied)

MP-43 tripod mount

Design and specifications are subject to change without notice.


Approximately 30 minutes of warm-up are required to achieve these specifications.

Frame Rate Reference


[Theoretical value]

Pixel count (MP)	Resolution (screen size)	Pixel size (um)	Imge size (mm)	Frame rate (fps @8bit)
5.1MP	2464 x 2056	3.45 x 3.45	2/3" (11.1 mm)	22.7
2MP	1920 x 1080	3.45 x 3.45	1/2" (7.6 mm)	55.5
1.4MP	1408 x 1050	3.45 x 3.45	1/2.6" (6.04 mm)	68.4
1.3MP	1280 x 1024	3.45 x 3.45	1/2.8" (5.66 mm)	70.1
0.5MP	800 x 600	3.45 x 3.45	1/4.6" (3.45 mm)	116.5
0.3MP	640 x 480	3.45 x 3.45	1/5.75" (2.76 mm)	143.4

Spectral Response

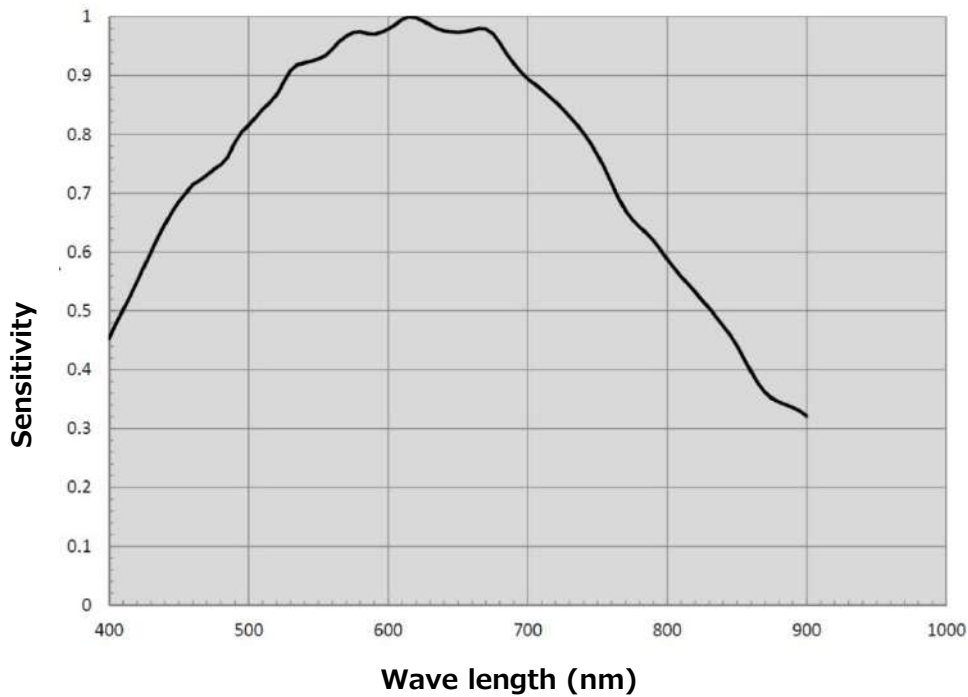

Dimensions

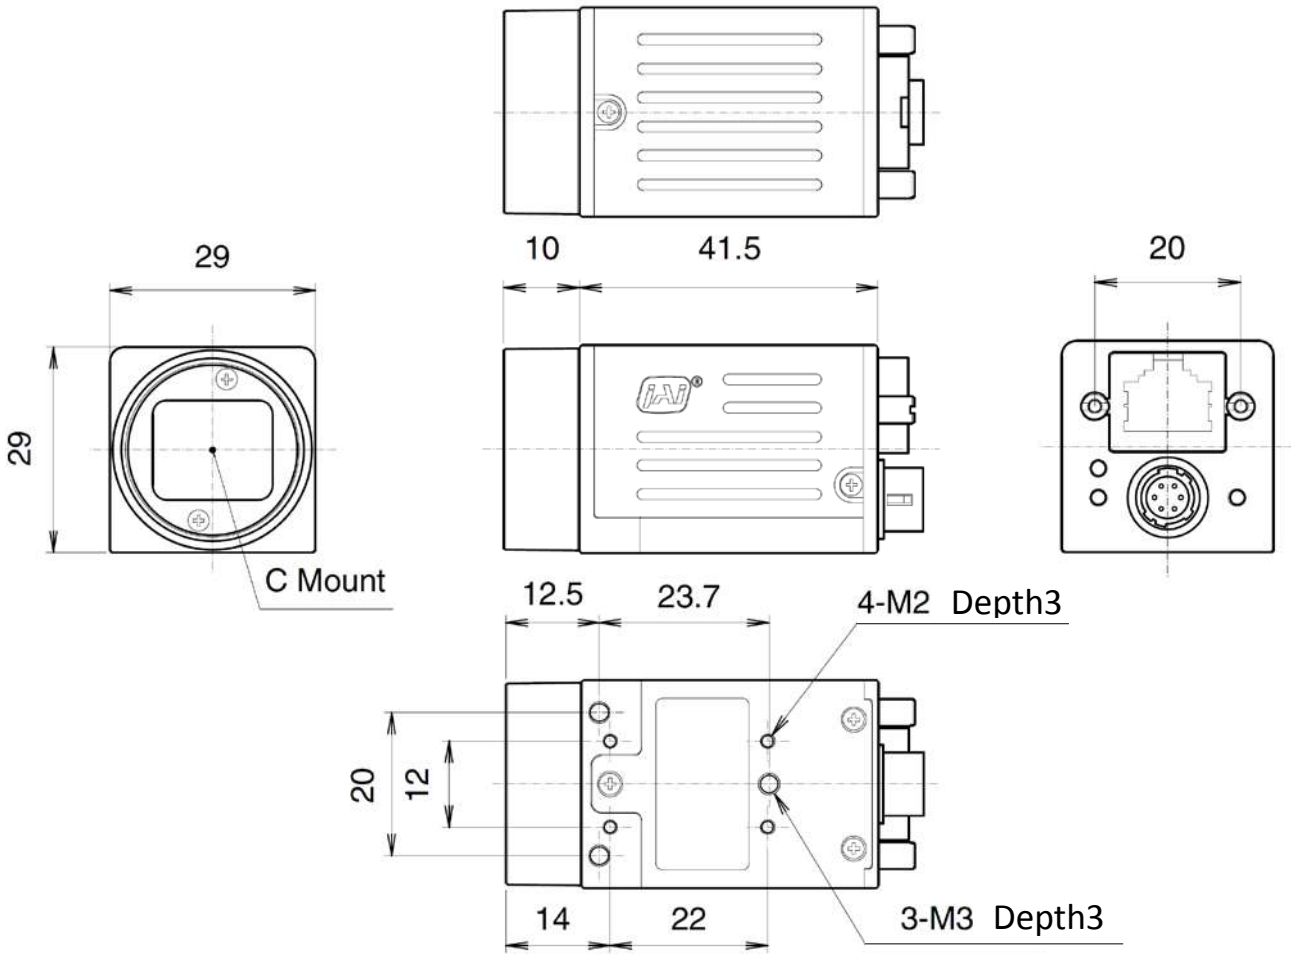

Dimensional tolerance: $\pm 0.3\text{mm}$
 Unit: mm

Comparison of the Decibel Display and Multiplier Display

Decibels[db]	Multipliers[x]	Remarks
-6	0.501	
-5	0.562	
-4	0.631	
-3	0.708	
-2	0.794	
-1	0.891	
0	1	
1	1.122	
2	1.259	
3	1.413	
4	1.585	
5	1.778	
6	1.995	
7	2.239	
8	2.512	
9	2.818	
10	3.162	
11	3.548	
12	3.981	
13	4.467	
14	5.012	
15	5.623	
16	6.31	
17	7.079	
18	7.943	
19	8.913	
20	10	
21	11.22	
22	12.589	
23	14.125	
24	15.849	
25	17.783	
26	19.953	
27	22.387	
28	25.119	
29	28.184	
30	31.623	
31	35.481	
32	39.811	
33	44.668	
34	50.119	
35	56.234	
36	63.096	

User's Record

Camera type: GO-5100MP-PGE

Revision:

Serial No:

Firmware version:

For camera revision history, please contact your local JAI distributor.

Trademarks

- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.
- Intel and Intel Core are trademarks of Intel Corporation in the United States and other countries.

Other system and product names described in this document are trademarks or registered trademarks of their respective owners. The ™ and ® symbols are not used in this document.

Index

6-pin round **8**

A

Acquisition Control **30**
Acquisition modes **30**
Adjusting the Black Level **19**
Adjusting the Gain **19**

B

Binning Function **27**
Black level **19**
Blemish Compensation **39**

C

Camera locking screw holes **10**
Chunk Data Function **46**
C-mount **7**
Connecting Devices **12**
Counter And Timer Control Function **44**

D

DC IN **8**
DC IN / TRIG connector **8**
Digital Input/Output Settings **22**
Dimensions **63**

E

Exposure Mode **32**

F

Feature Properties **47**
Frame Rate **30**
Frame Rate Reference **62**

G

GPIO **22**

I

Installing the Software **11**

L

LED **7**
Lens **12**
Lens mount **7**
Line Status **38**

M

Maximum Frame Rate **30**

O

Optional accessories (not supplied) **61**
Output format **23**

P

Parts Identification **7**
POWER/TRIG LED **7**

R

Regional Scanning Function **29**
ROI **29**

S

Saving the Settings **20**
Sequencer Function **42**
Setting List **47**
Shading Correction **40**
Specifications **60**
Spectral Response **62**

T

Trigger Control **33**
Trigger IN **8**
Trigger Selector **22**
Troubleshooting **59**

U

User memory **20**

V

Video Process Bypass Mode **46**

